



Bange (L5e-B) 配件图册

Bange (L5e-B) spare parts catalogue

浙江睿璞智能汽车股份有限公司
Zhejiang RAP intelligent vehicle CO,LTD

前言

为了更好的践行睿璞机车的服务理念，不断提升售后服务水平，方便终端客户订购配件查询，特编制本图册。本图册中列出了 Bange 车型各主要总成及主要选装配置的结构及明细，为了使您快速并准确的查询到睿璞机车正品配件，建议您在使用本图册时注意以下事项：

1. 《Bange 配件图册》仅适用于 Bange 产品，不适合其他产品。
2. 在订购某配件时，需明确指明其配件编号。
3. 按下述方法查找配件编号：
 - (1). 在总目录中找到需要的备件所在系统的名称（标准件除外），本图册按照机车零部件的功能分为四大系统：动力、底盘、电器、车身及附件。
 - (2). 根据配件的所属系统，在目录里找到对应装置的页码。
 - (3). 按照指定的页码找到对应的明细。
 - (4). 根据明细确定备件编码。
4. 本图册仅供客户购买配件时使用，图片均为示意图，请以原车实物为准。本图册根据出版时所能得到的最新资料编制而成，随着技术的不断进步与更新，Bange 产品结构可能会有变更，请及时关注相关变更通知。

Preface

The Catalogue is prepared to better practice the concept of RAP Vehicle, constantly improve after-sales service level and provide convenience for end customers to order parts and inquire.

The structure and details of each principal assembly and main optional configuration of Bange model are listed in the Book, and it is recommended that you note the followings when using the Catalogue in order to enable you to quickly and accurately find the certified accessories of RAP Vehicle:

1. The Bange Spare Parts Catalogue is only applicable to Bange products and not applicable to other products.
 2. When ordering a certain parts, its part No. shall be clearly indicated.
 3. The part No. is searched following below steps:
 - (1). Find the name of the system where the required spare parts are located in the general catalog (except standard parts). The Catalogue is divided into four systems according to the functions of the locomotive parts: power, chassis, electrical appliances, Body and accessories.
 - (2). Find the page number of the corresponding device in the Contents according to the system to which the accessory belongs.
 - (3). Find the corresponding details according to the specified page number.
 - (4). Determine the spare part code according to the details.
 4. The Catalogue is used for customers to purchase parts only. The figures are schematic drawings, and please refer to the actual products of original vehicle.
- The Catalogue is prepared based on the latest information available at the time of publication. The Bange product structure may change with the continuous progress and update of technology. Please pay attention to the related change notification timely.

如何查阅备件图册How to access the spare parts catalog


A: 图示目录 (List of Illustrations)

目录	
动力系统.....	2-5
电动驱动系统.....	2
底盘.....	6-19
后桥.....	6
支承连接装置.....	8
车架.....	10
悬置.....	12
车轮及轮毂.....	14
转向.....	16

C: 注释 (explanatory note)

- ① 系统装置 System device
- ② 系统划分 System partitioning
- ③ 零件序号 Part number
- ④ 对应页码 Corresponding page number
- ⑤ 装置名称 Device Name
- ⑥ 所在页码 Page number
- ⑦ 补充说明 Supplementary explanation
- ⑧ 订购明细 Ordering Details


B: 图示配置 (Figure Configuration)

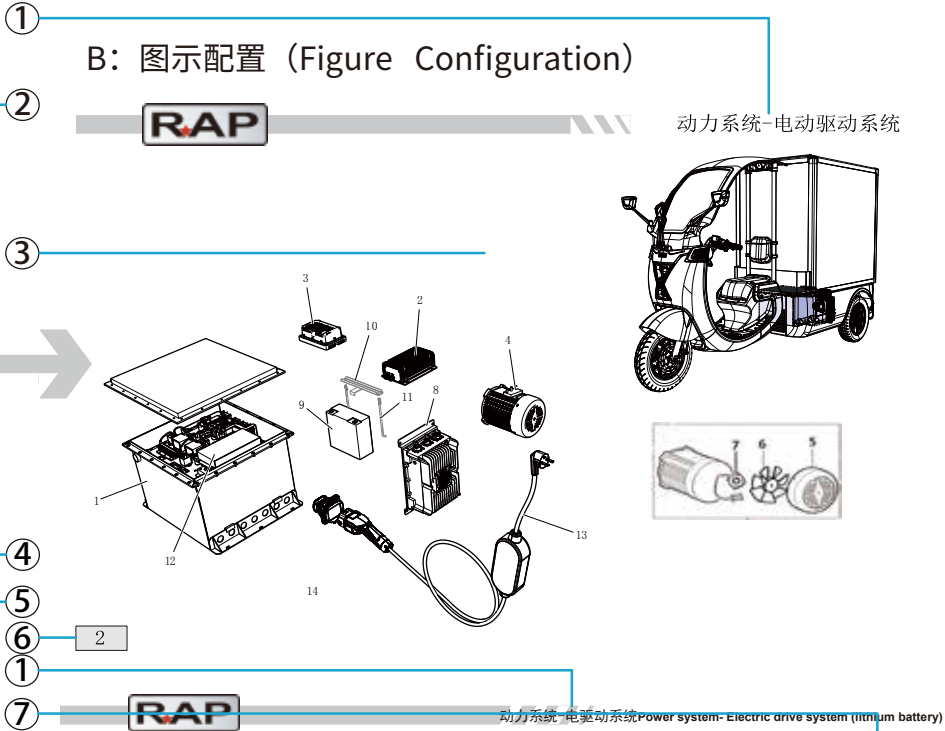

序号 (NO)	零部件代号 component code	零部件名称	Vcomponent name	数量 quantity	备注 notes
1	2101010-R1112	动力电池总成	Power battery	1	
2	2123010-R1113	DC/DC 转换器总成	DC/DC converter assy	1	
3	2104010-R1122	驱动电机控制器总成	Drive motor controller assy	1	
4	2103010-R1001	驱动电机总成	Drive motor assy	1	
5	2103011-R10	驱动电机尾罩	Drive motor tail cover	1	
6	2103012-R10	驱动电机风扇	Drive motor fan	1	
7	2103013-R10	驱动电机编码器	Drive motor encoder	1	
8	2107030-R1123	车载充电机总成	On-board charger assy	1	
9	3703010-R1101	12V 蓄电池	12V battery	1	
10	2101050-R1101	蓄电池压条总成	12V battery moulding assy (lithium battery)	2	
11	2101052-R111	电池压条固定杆	12V battery corner moulding mount rod (lithium battery)	2	
12	2101015-R1112	BMS	BMS	1	
13	2107050-R1012	充电枪带线束总成	Portable EV charger assy with cable	1	
14	2107040-R1021	充电座带线束总成	On-board charger assy	1	


目 录(directory)

动力系统.....	2-3	Power syste.....	2 - 3
动力系统 - 电驱动系统.....	2-3	Power System - Electric Drive System two.....	2 - 3
底盘.....	4-20	Chassis	4 - 20
底盘 - 后桥.....	4 - 6	Chassis - Rear Axle.....	4 - 6
底盘 - 支承连接装置.....	7 - 10	Chassis support connection device.....	7 - 10
底盘 - 车架系统.....	11 - 12	Chassis Frame System	11 - 12
底盘 - 悬架系统.....	13 - 14	Chassis Suspension System	13 - 14
底盘 - 车轮及轮毂.....	15 - 16	Chassis - Wheels and Hubs	15 - 16
底盘 - 转向系统.....	17 - 18	Chassis Steering System	17 - 18
底盘 - 制动系统.....	19 - 20	Chassis Brake System	19 - 20
电器.....	21-30	Electrical Appliances	21 - 30
电器 - 电子装置.....	21 - 22	Electrical and Electronic Devices	21 - 22
电器 - 电气设备.....	23 - 24	Electrical Appliances - Electrical Equipment	23 - 24
电器 - 组合仪表与灯具.....	25 - 26	Electrical Appliances - Combination Instruments and Luminaires	25 - 26
电器 - 车用信息通讯与声像设备.....	27 - 28	Electrical Appliances - Vehicle Information Communication and Audio Visual Equipment	27 - 28
电器 - 电线束与保险盒.....	29 - 30	Electrical Appliances - Wiring Harnesses and Fuse Boxes.....	29 - 30
车身及附件.....	31 - 58	Body and accessories	31 - 58
车身及附件 - 车箱01.....	31 - 32	Body and accessories - body 01.....	31 - 32
车身及附件 - 车箱02.....	33 - 34	Body and accessories - body 02.....	33 - 34
车身及附件 - 车箱03.....	35 - 36	Body and accessories - body 03.....	35 - 36
车身及附件 - 车箱04.....	37 - 38	Body and accessories - body 04.....	37 - 38
车身及附件 - 车身地板总成.....	39 - 40	Body and Accessories - Body Floor Assembly.....	39 - 40
车身及附件 - 风窗.....	41 - 42	Body and accessories - Windshield	41 - 42
车身及附件 - 前围.....	43 - 44	Body and accessories - front wall	43 - 44
车身及附件 - 内护板.....	45 - 46	Body and accessories - inner guard board	45 - 46
车身及附件 - 后围.....	47 - 48	Body and accessories - rear bumper	47 - 48
车身及附件 - 驾驶员座椅.....	49 - 50	Body and accessories - driver's seat	49 - 50
车身及附件 - 随车工具及组件.....	51 - 54	Body and accessories - onboard tools and components	51 - 54
车身及附件 - 标准件清单.....	55 - 64	Body and Accessories - Standard Parts List	55 - 64

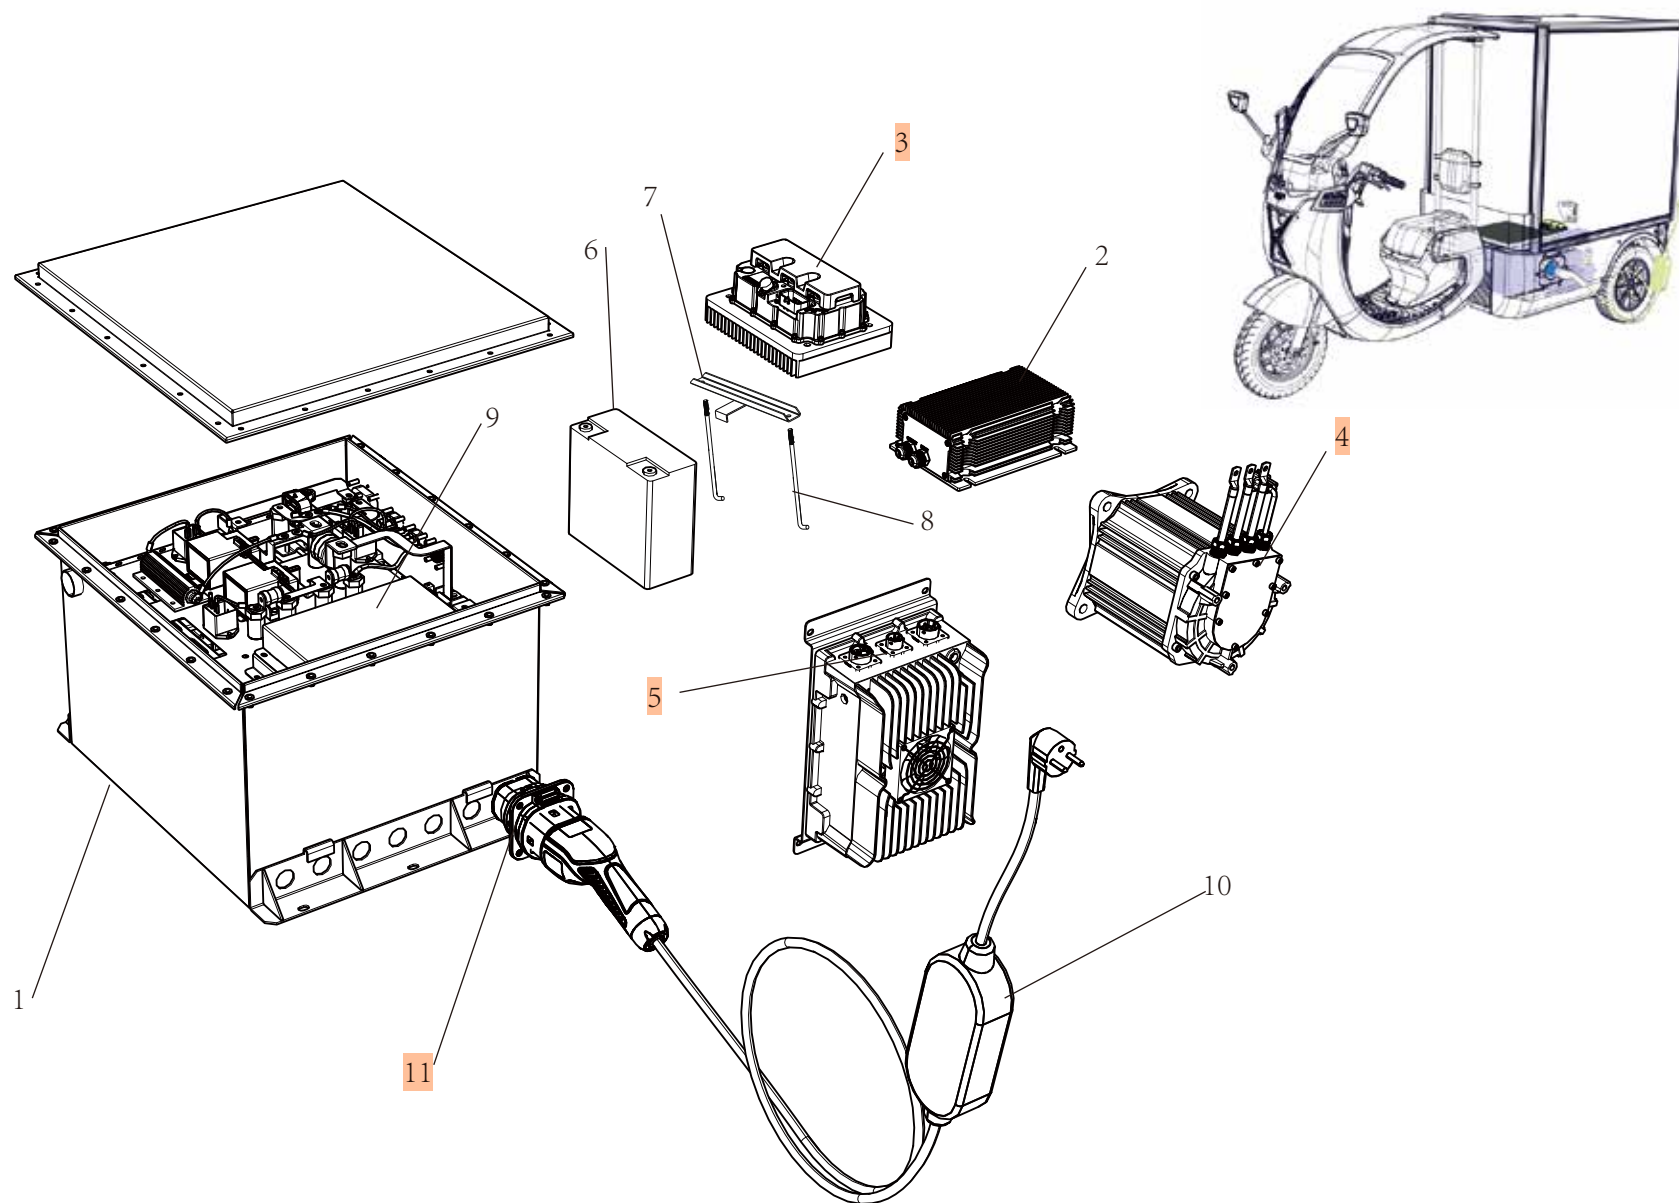




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	2101015-R1112	动力电池总成	Power battery	1	天宏锂电
2	2123010-R1113	DC/DC 转换器总成	DC/DC converter assy	1	麦格米特
3	2104010-R12	驱动电机控制器总成	Drive motor controller assy	1	Bange(L5专用)
4	2103010-R12	驱动电机总成	Drive motor assy	1	Bange(L5专用)
5	2107030-R1123	车载充电机总成	On-board charger assy	1	220V /110快充
6	3703010-R1101	12V 蓄电池	12V battery	1	
7	2101050-R1101	蓄电池压条总成	12V battery moulding assy (lithium battery)	1	
8	2101052-R11	电池压条固定杆	12V battery corner moulding mount rod (lithium battery)	2	
9	2101015-R1112	BMS	BMS	1	天宏锂电
10	2107050-R1014	充电枪带线束总成	Portable EV charger assy with cable	1	欧标快充
	2107100-R1001	充电枪带线束总成	Portable EV charger assy with cable	1	快充 (110V专用)
11	2107040-R1022	充电座带线束总成	On-board charger assy	1	快充

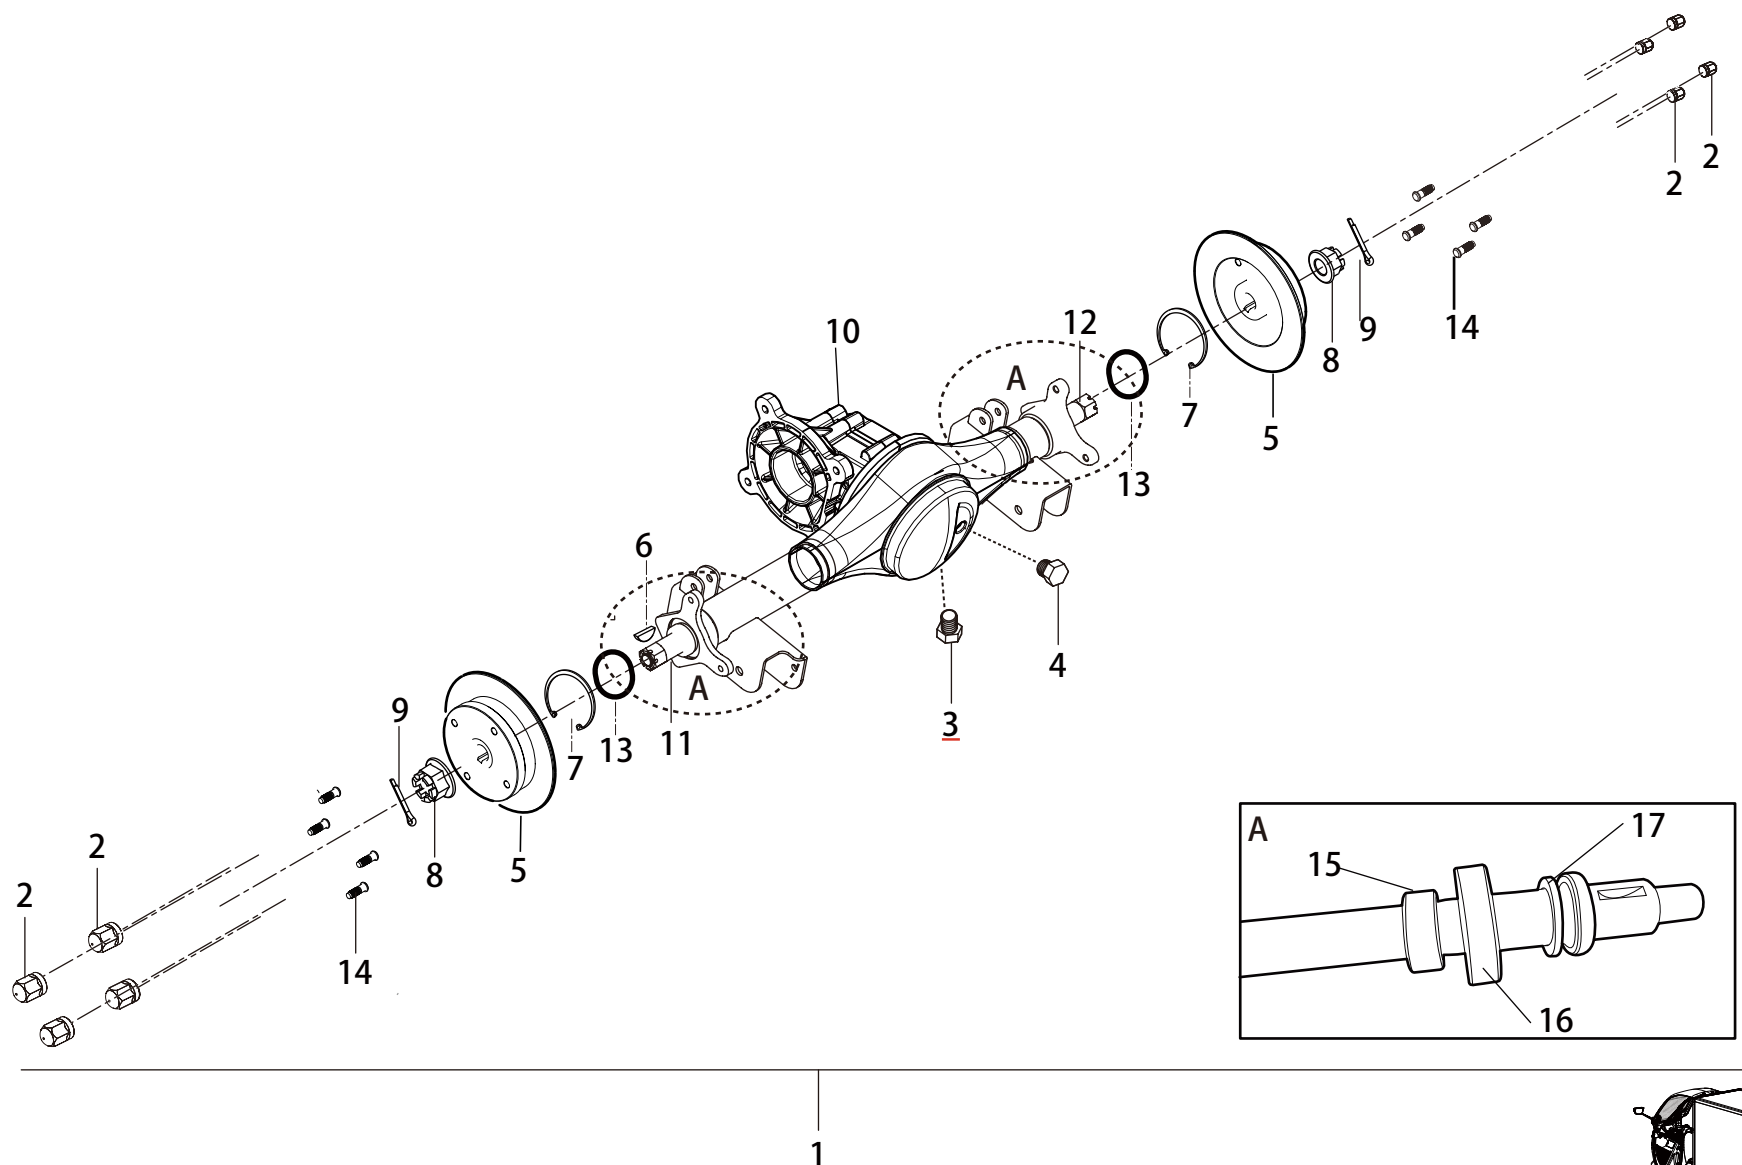

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	2401100-R12	后桥总成	Rear axle assy	1	10: 1
2	Q395C10	轮胎螺母	Wheel nut	8	
3	3106104-R10	放油孔螺栓	Oil drain plug	1	
4	3106103-R10	注油孔螺栓	Oil fill plug	1	
5	3502035-R10	后制动盘总成	Rear disc assy	2	
6	Q5500625	半圆键	Woodruff key	2	
7	Q43062	弹性挡圈	Elastic retaining ring	2	
8	2401109-R10	半轴螺母	Half shaft nut	2	M20六角法兰开槽螺母
9	Q5002536	开口销	Cotter pin	2	
10	2401130-R12	差速器	Differential	1	
11	2401103-R10	左半轴	Left half shaft	1	10: 1
12	2401104-R10	右半轴	Righ half shaft	1	
13	2401140-R10	油封	oil seal	2	
14	3106107-R10	轮毂螺栓	Wheel hub bolt	8	
15	2401114-R10	轴承挡圈	Bearing ring	2	
16	2401160-R10	深沟球轴承	Ball bearing(Deep groove)	2	
17	2401116-R10	轴承垫圈	Bearing washer	2	

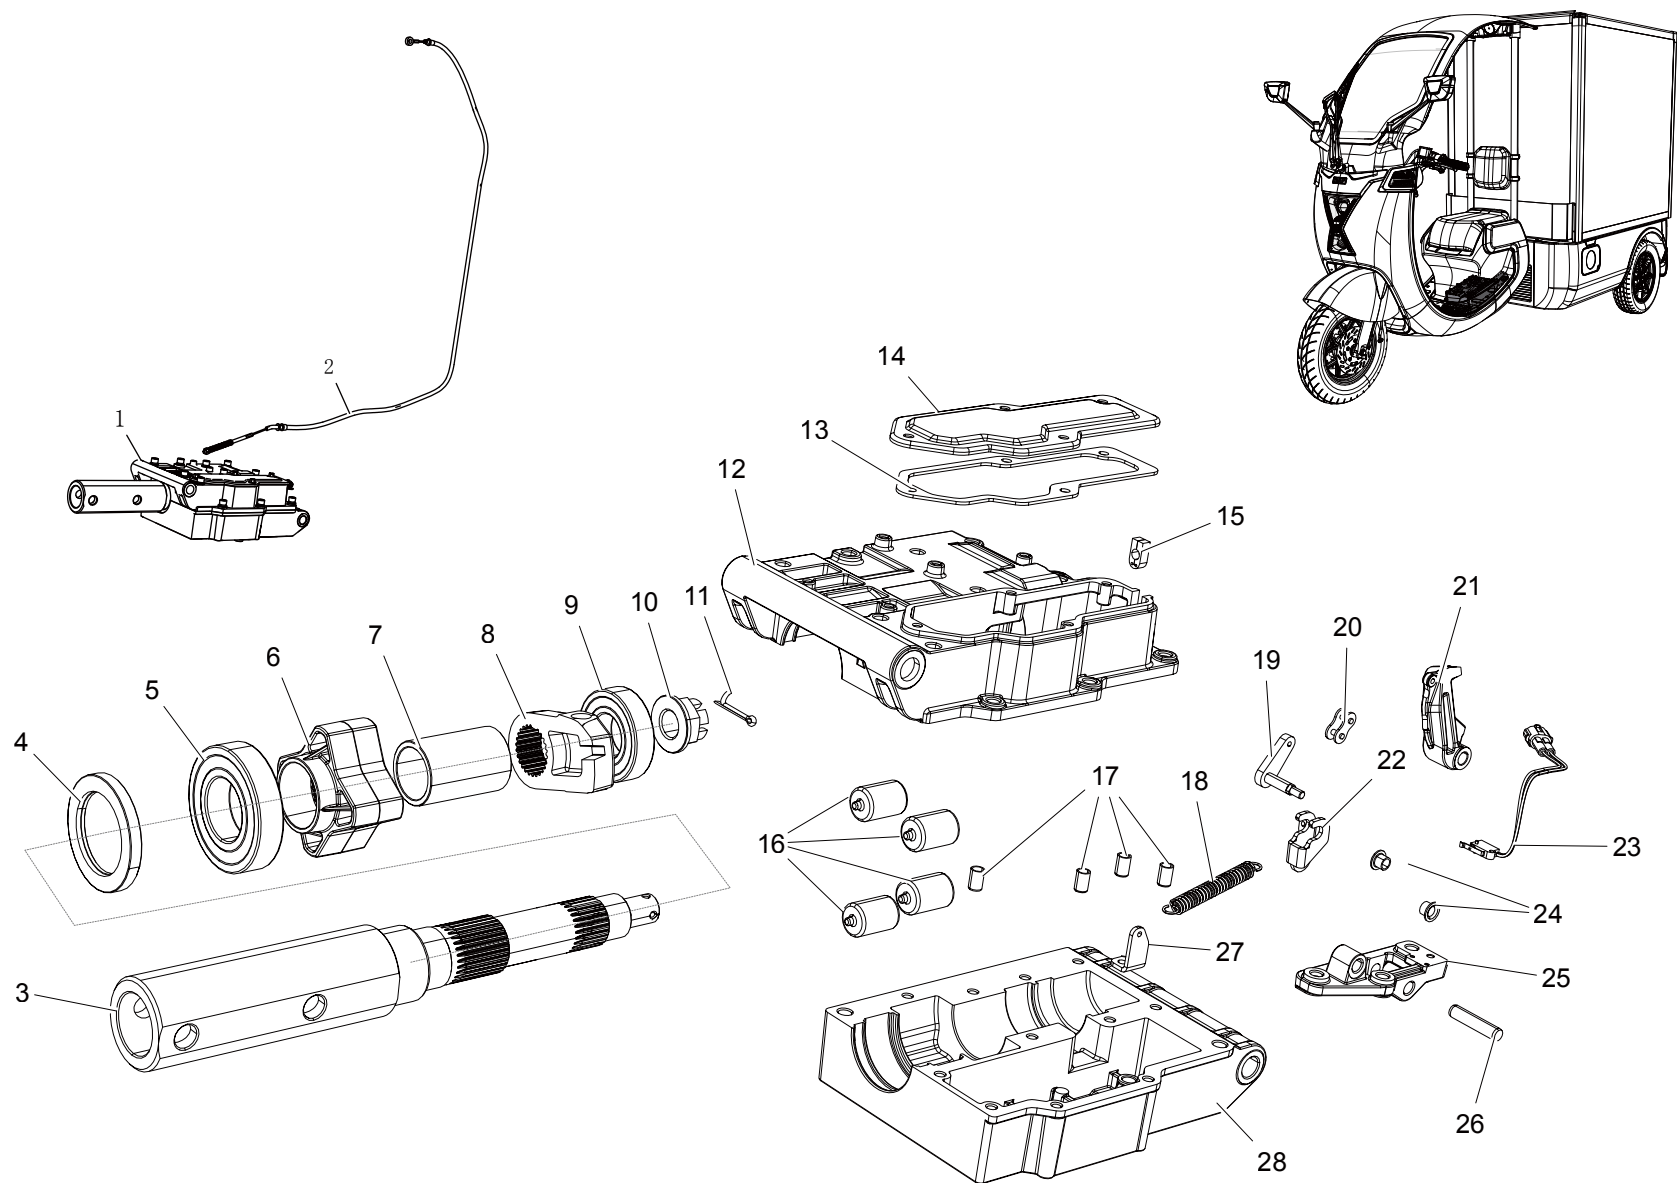




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	2745010-R11	摇摆器	Swinging Device	1	更改前
	2745010-R1101	摇摆器	Swinging Device	1	更改后
2	2745020-R1101	摇摆器锁止拉线	Swinger locking cable	1	
3	2745101-R11	主轴	Spindle	1	更改前
	2745101-R1111	主轴	Spindle	1	更改后
4	2745102-R11	密封圈	Sealing ring	1	
5	2745103-R11	6208-2RZ轴承	6208-2RZ bearing	1	更改前
	2745103-R1111	6209-2RZ轴承	6209-2RZ bearing	1	更改后
6	2745104-R11	凸轮	Cam	1	更改前
	2745104-R1111	凸轮	Cam	1	更改后
7	2745106-R11	中隔套	Middle spacer sleeve	1	更改前
	2745106-R1111	中隔套	Middle spacer sleeve	1	更改后
8	2745107-R1101	角度限位块	Angle limit block	1	更改前
	2745107-R1111	角度限位块	Angle limit block	1	更改后
9	2745108-R11	6206-2RZ轴承	6206-2RZ bearing	1	
10	2745109-R11	全金属六角法兰面开槽螺母	All metal hexagonal flange slotted nut	1	
11	Q5003232	开口销	Split pin	1	
12	2745021-R11	上壳体	Upper shell	1	更改前
	2745011-R1111	上壳体	Upper shell	1	更改后
13	2745022-R11	密封垫	Sealing gasket	1	
14	2745023-R11	检修盖	Access cover	1	
15	2745019-R11	拉线密封套	Cable sealing sleeve	1	




底盘-支承连接装置 (Chassis support Connection device)


序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
16	2745013-R11	减震橡胶	Shock-absorbing rubber sleeve	4	
17	2745012-R11	定位套	Positioning sleeve	4	
18	2745017-R11	回位拉簧	Return tension spring	1	
19	2745203-R11	锁止块驱动臂	Locking block drive arm	1	
20	2745205-R11	锁止块连接板	Locking block connecting plate	1	
21	2745202-R1101	锁止块	Locking block	1	
22	2745014-R11	拉线连接臂	Cable connecting arm	1	
23	3503010-R1111	限速开关	Speed limit switch	1	
24	2745206-R11	翻边铜套	Flared copper sleeve	2	
25	2745201-R1101	锁止块安装支架	Locking block installation bracket	1	
26	Q5211045	圆柱销	Cylindrical pin	1	
27	2745016-R11	弹簧挂架	Spring hanger	1	
28	2745011-R11	下壳体	Lower housing	1	更改前
	2745021-R1111	下壳体	Lower housing	1	更改后

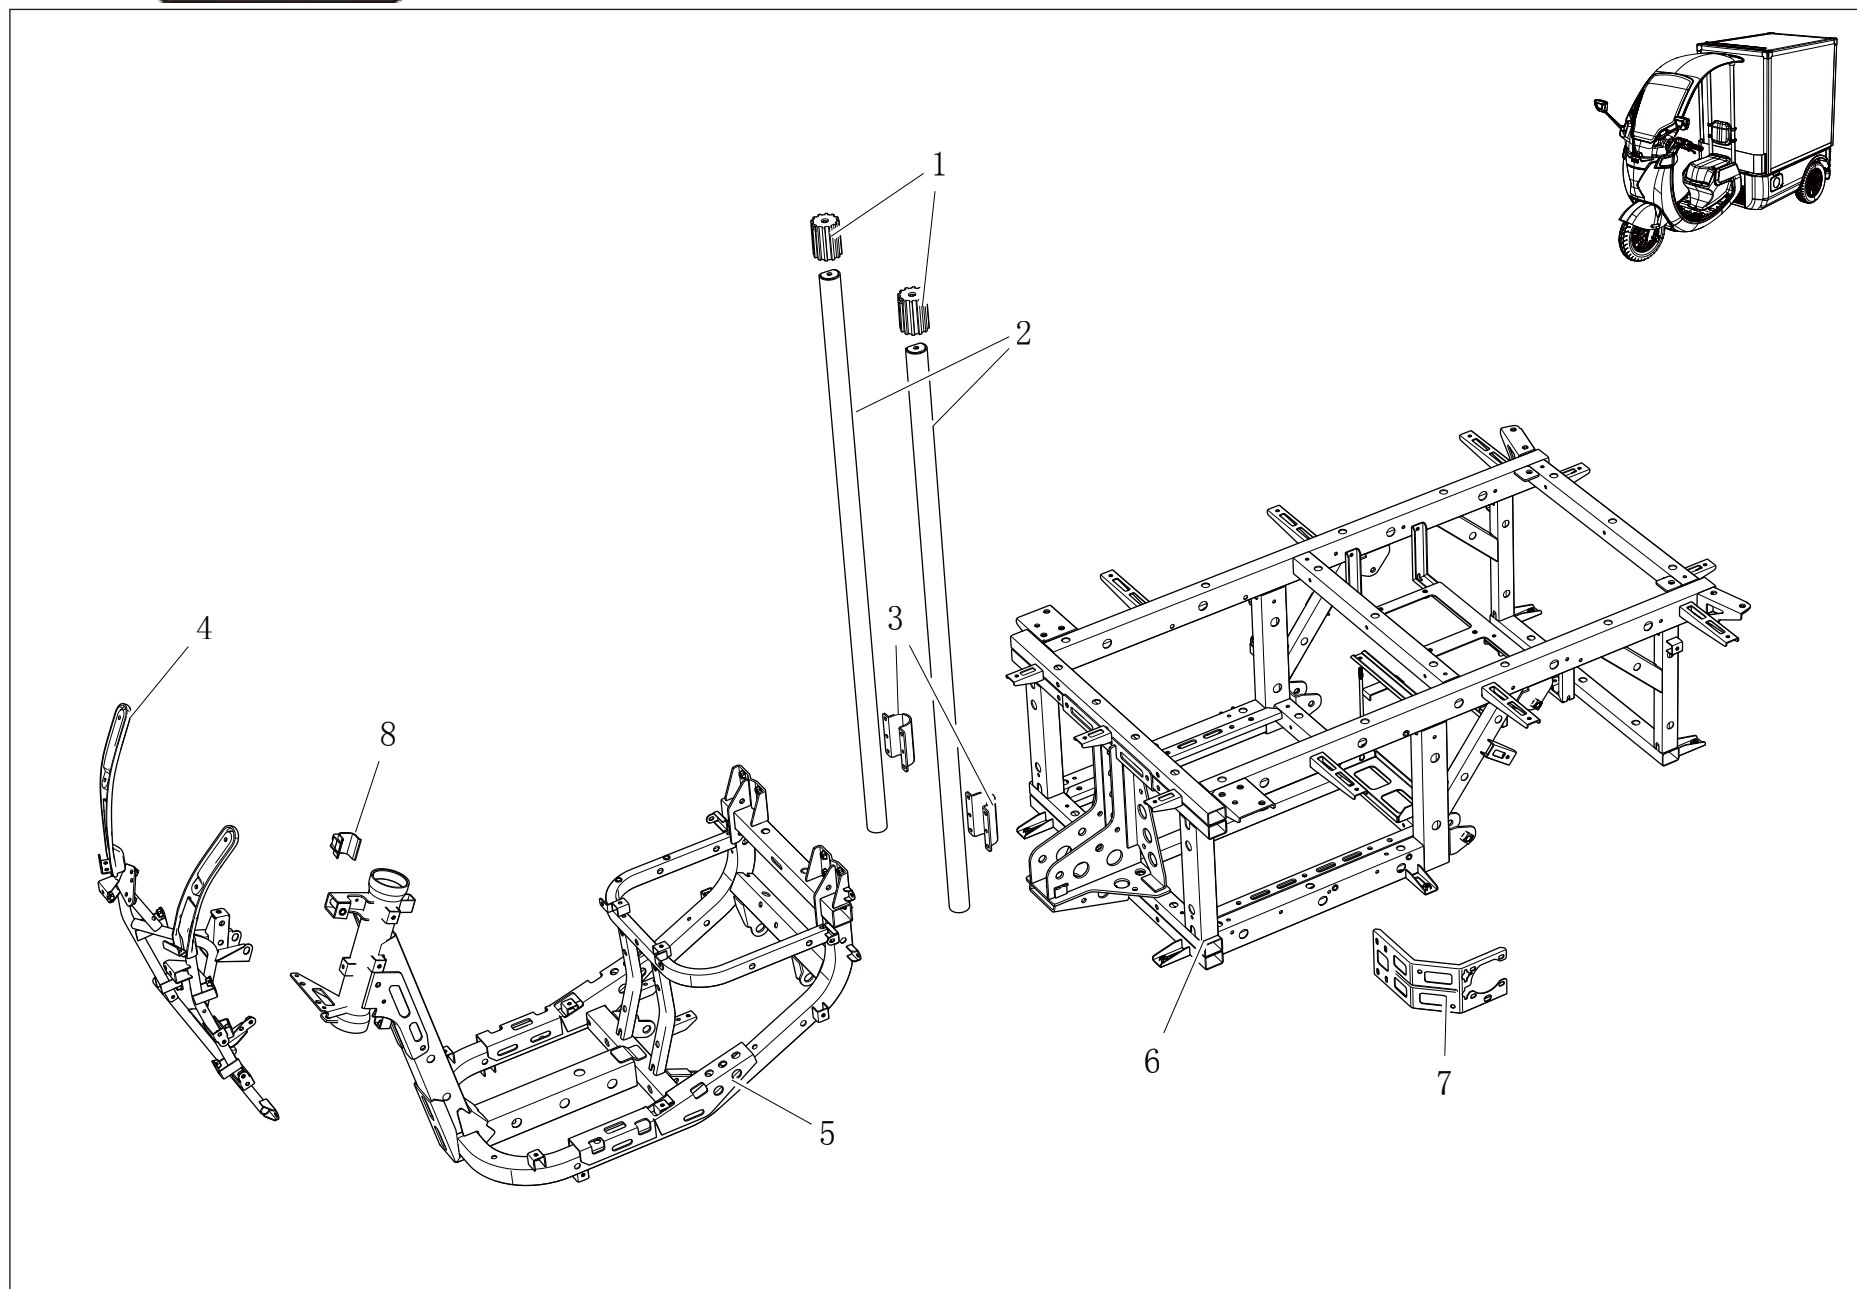

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	2801103-R10	支撑管橡胶套	Windshield supporting tube rubber sleeve	2	
2	2801110-R1011	风挡支撑管分总成	Windshield supporting tube sub assy	2	
3	2801101-R10	风挡支撑管下部限位支架	Windshield support bottom mounting bracket	2	
4	2810100-R1101	前副车架	Front sub-frame	1	
5	2801100-R1023	前车体焊接总成	Front welding body assy	1	
6	2801200-R1122	后车体焊接总成	Rear welding body assy	1	
7	5601016-R10	充电口总成加强支架	Charging port assembly reinforcement bracket	1	
8	2801107-R11	开口防护套	Open protective cover	1	

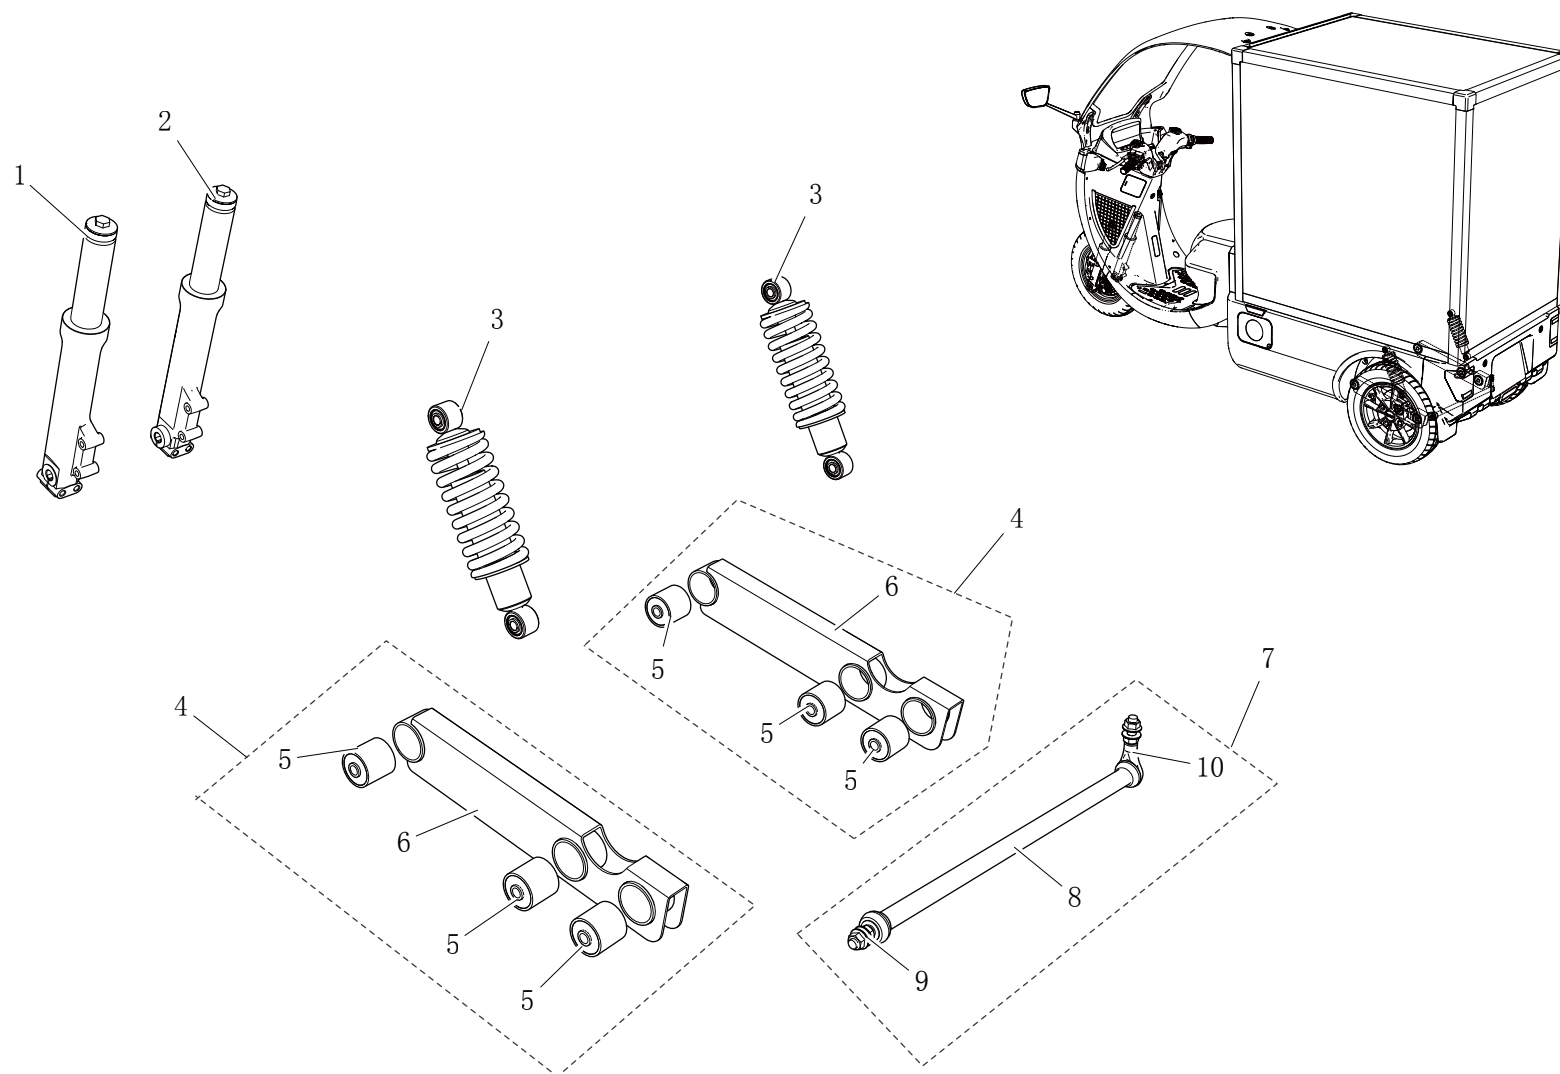


序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	2905100-R10	左前减震器	Left front shock absorber	1	
2	2905200-R10	右前减震器	Right front shock absorber	1	
3	2915100-R10	后减震器	Rear shock absorber	2	
4	2911100-R10	拖曳臂总成	Trailing arm assy	2	
5	2911101-R10	拖曳臂胶套	Trailing arm gum rubber sleeve	6	
6	2911102-R10	拖曳臂	Trailing arm	2	
7	2916100-R10	侧向稳定杆后拉杆总成	Lateral stabilizer bar assy	1	
8	2916101-R10	侧向稳定杆后拉杆管柱	Lateral stabilizer bar	1	
9	2916110-R10	左球头总成	Left ball joint assy	1	
10	2916120-R10	右球头总成	Right ball joint assy	1	

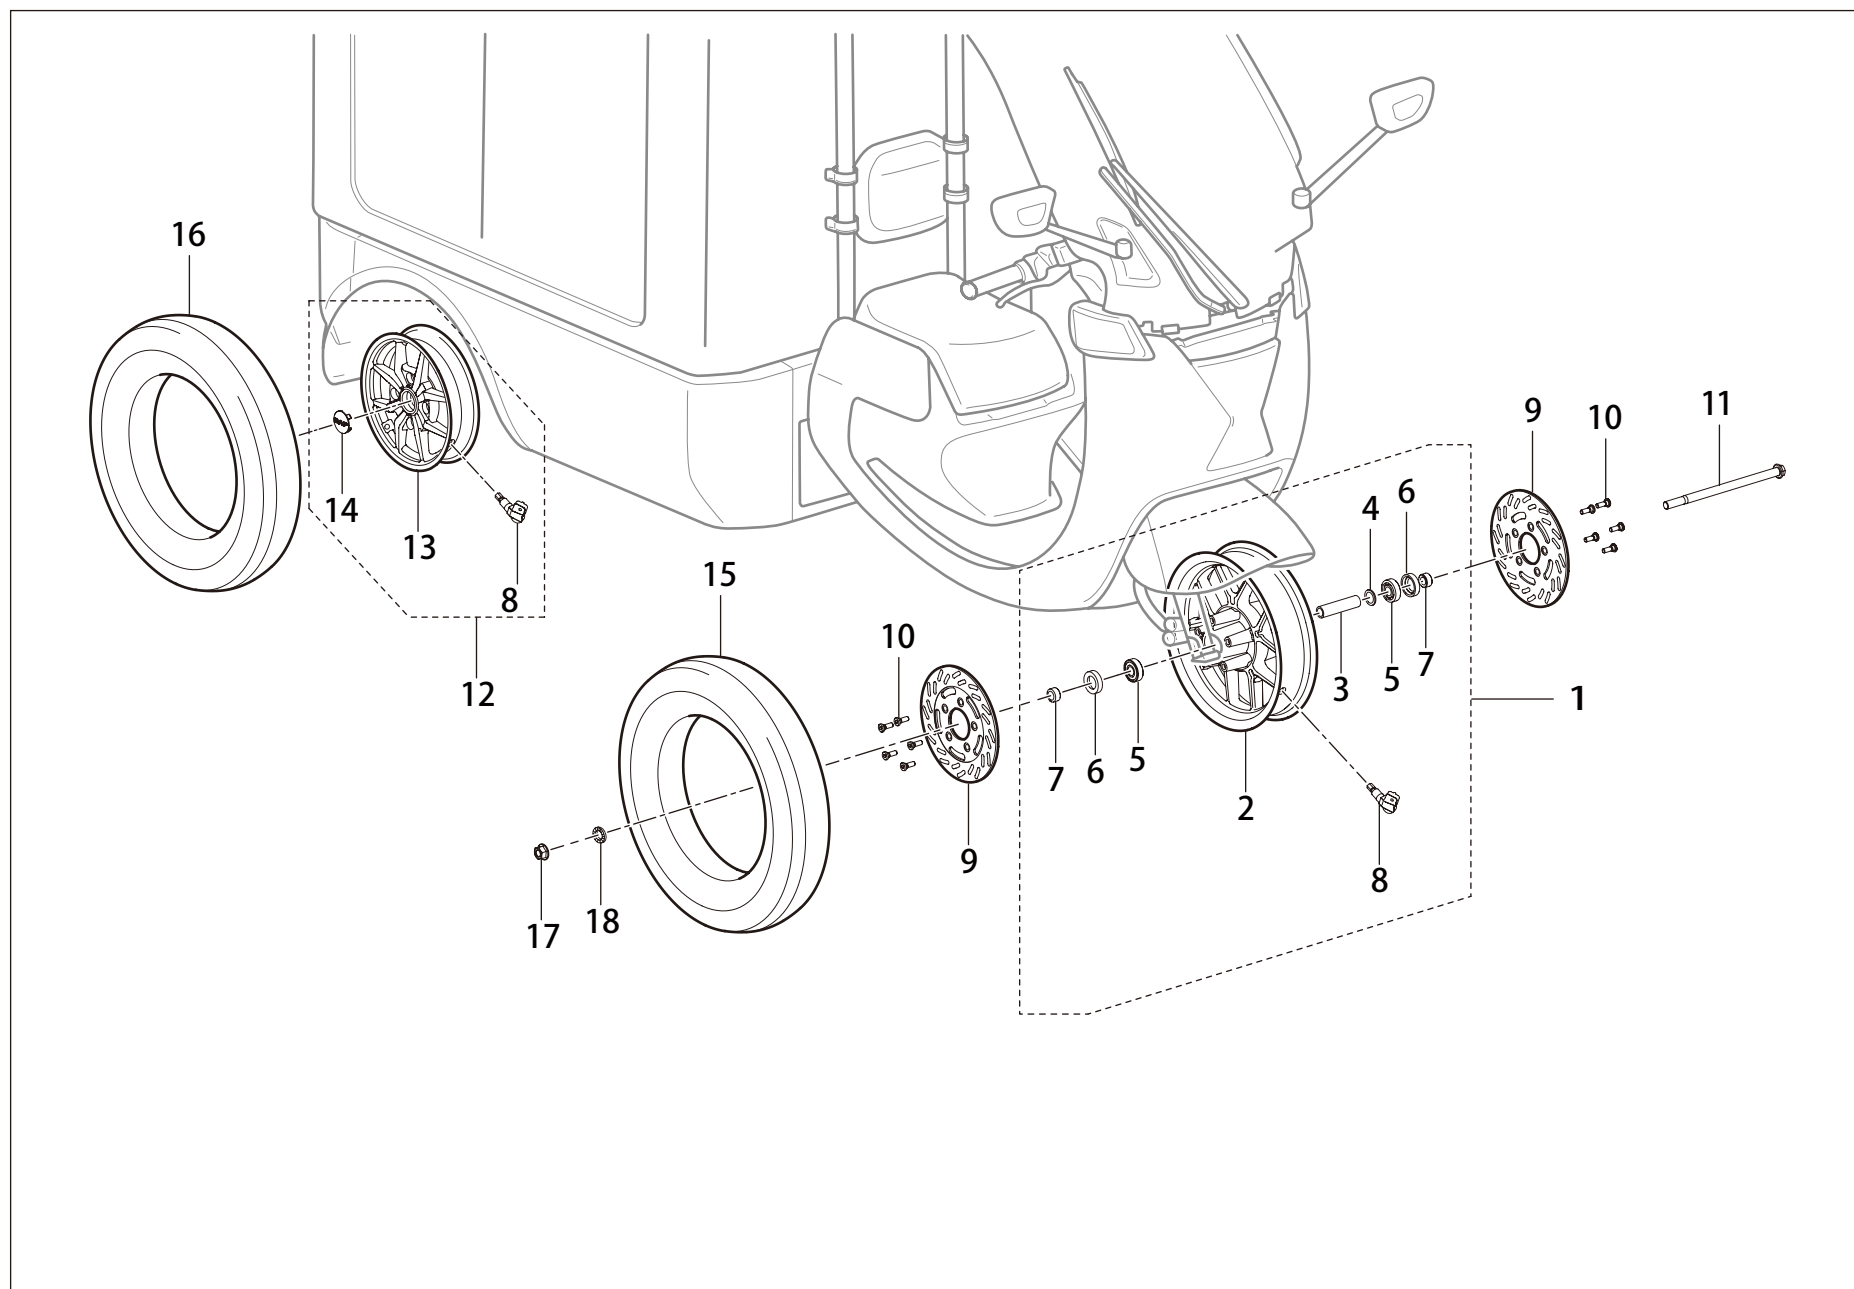




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3101100-R1001	前轮辋总成	Front rim assy	1	
2	3101111-R10	前轮辋	Front rim	1	
3	3101107-R10	支承套	Supporting sleeve	1	
4	3101106-R10	橡胶套	Gum rubber sleeve	1	
5	3101105-R10	前轮轴承	Front wheel bearing	2	
6	3101109-R10	前轮油封	Front wheel oil seal	2	
7	3101104-R10	前轮轴套	Front wheel axle sleeve	2	
8	3113105-R10	前、后轮气门嘴	Inflating valve	3	
9	3501031-R1001	前制动盘	Front brake disc	2	
10	3501039-R1001	制动盘安装螺栓	Brake disc mounting bolt	10	
11	3101103-R10	前轮轴	Front axle	1	
12	3104100-R10	后轮毂总成	Rear hub assy	2	
13	3104102-R10	后铝轮	Rear hub	2	
14	3102103-R10	轮毂 LOGO	Hub LOGO	2	
15	3106101-R10	前轮胎	Front Tire	1	110/90-12
16	3106108-R10	后轮胎	Rear tire	2	135 70R12
17	Q395B14	盖型螺母	Cap nut	1	
18	3101102-R10	双碟型自锁垫圈	Dual disc self-locking washer	1	

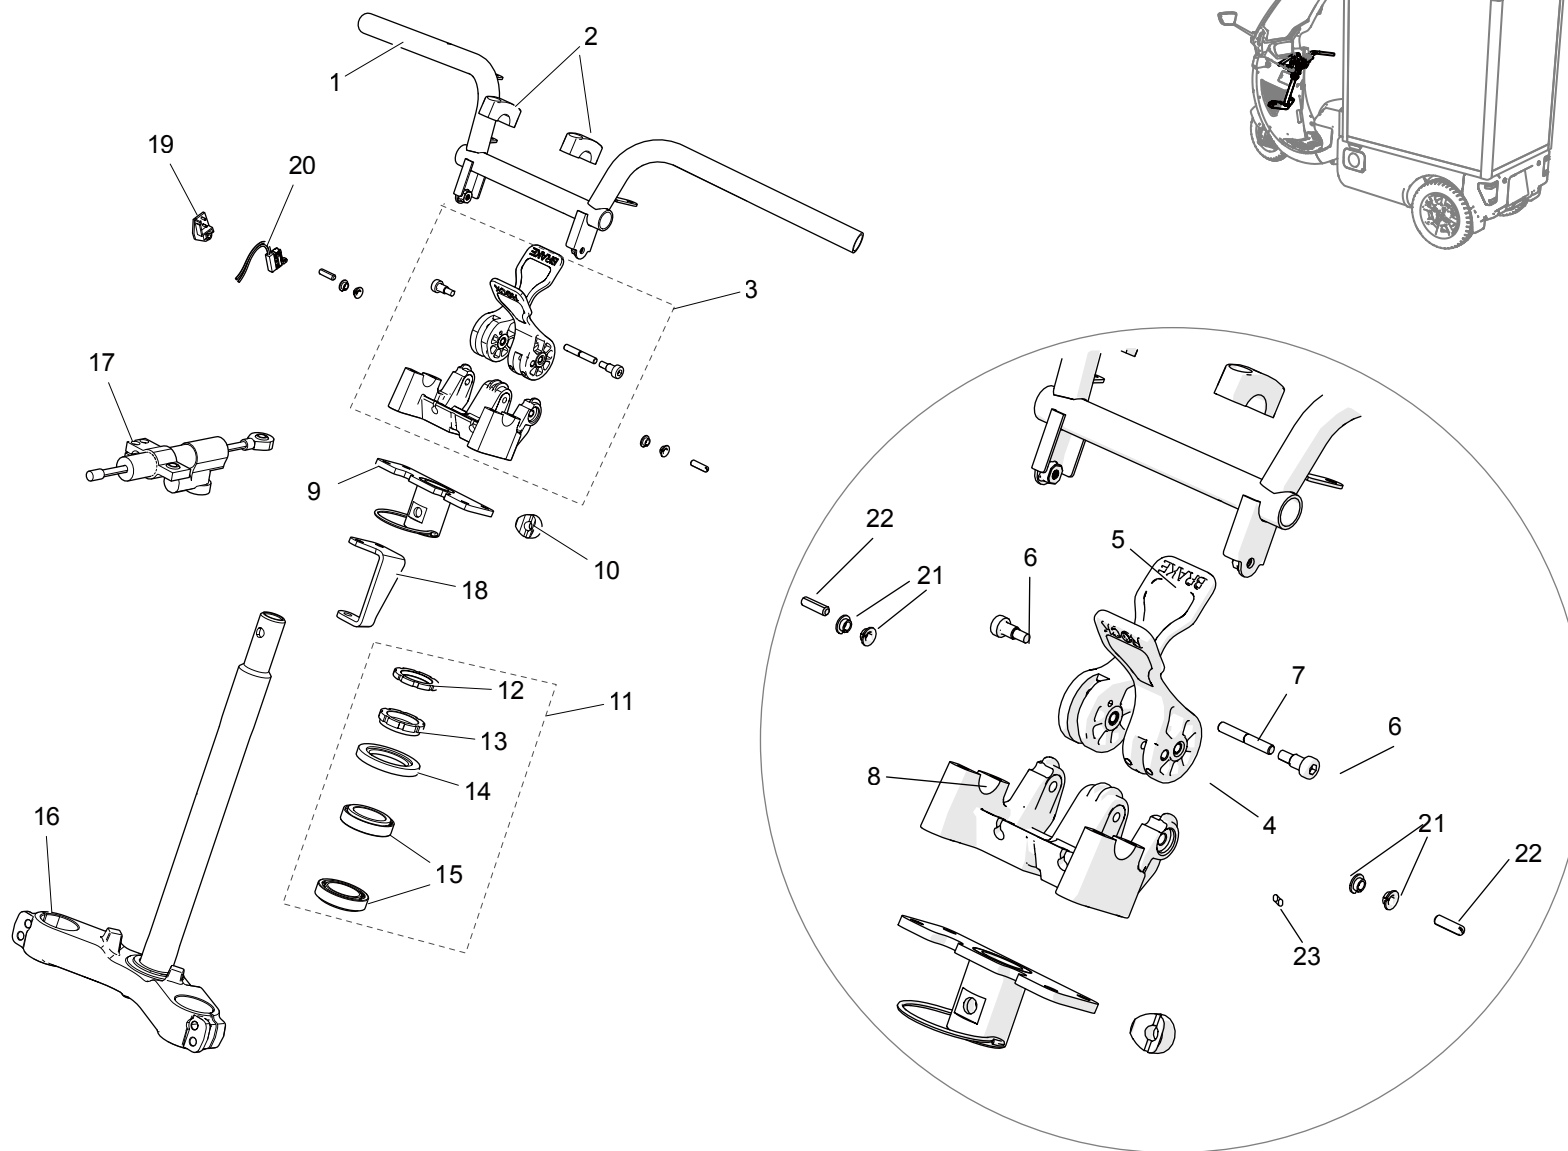


序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3421010-R1011	方向把组件	Steering handle component	1	改进后
2	3421029-R1011	方向把压块	Direction handle pressing block	2	
3	3421020-R1021	方向把安装组件	Installation component of steering handle	1	
4	3421022-R1021	摇摆器锁止手柄	Rocker locking handle	1	
5	3421023-R1021	驻车锁止手柄	Parking lock handle	1	
6	3421024-R1021	台阶螺栓	Step bolt	2	
7	3421027-R1011	中间轴	Intermediate shaft	1	
8	3421021-R1021	方向把安装下座	Install the lower seat of the steering handle	1	
9	3403010-R10	方向把安装底座	Installation base of steering handle	1	
10	3403011-R10	底座固定块	Base fixing block	1	
11	3404030-R10	转向柱修理包	Steering column repair kit	1	
12	3404022-R10	二级锁紧螺母	Secondary locking nut	1	
13	3404021-R10	一级锁紧螺母	First stage locking nut	1	
14	3404023-R10	上防尘盖	Upper dust cover	1	
15	3404025-R1011	转向轴承	Steering bearing	2	
16	3404010-R1011	方向管柱组件	Direction column assembly	1	
17	3404020-R10	方向阻尼器	Directional damper	1	
18	3404027-R10	阻尼器后安装支架	Installation bracket behind the damper	1	
19	3779041-R10	微动开关支架	Microswitch mounting bracket	1	
20	3779030-R10	微动开关	Microswitch	1	
21	3421031-R10	翻边铜套	Flared copper sleeve	4	
22	3421028-R10	销钉	Pin	2	
23	Q2800410	开槽锥端紧定螺钉	Slotted cone point set screw	1	

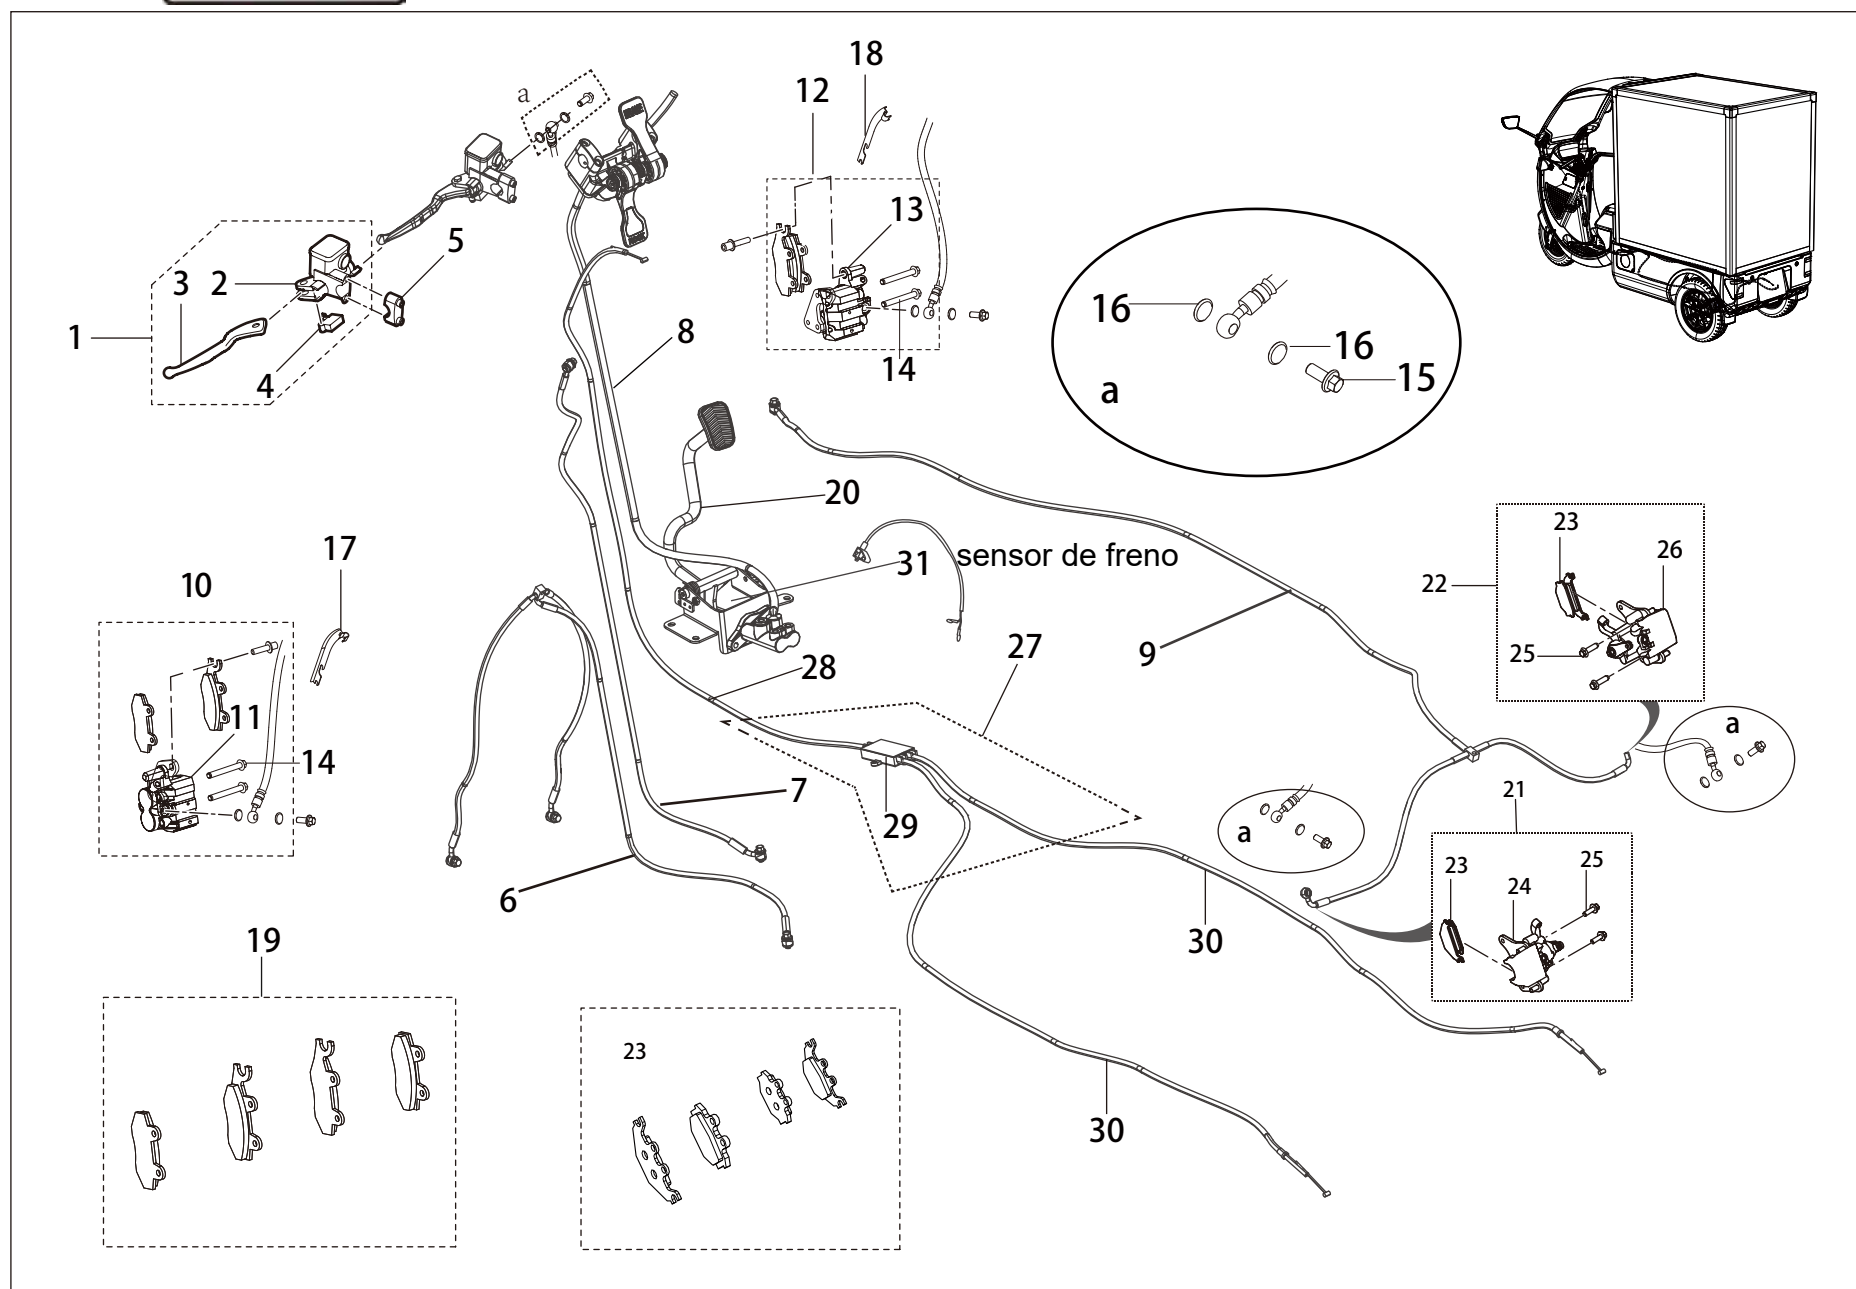

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3505100-R12	左制动手刹总成	Left brake handbrake assembly	1	带液位传感器
2	3505101-R12	左制动手刹主缸	Left brake handbrake master cylinder	1	带液位传感器
3	3505102-R1001	左制动手刹把手	Left brake handbrake handle	1	
4	3779020-R1001	左手刹接触开关	Left hand brake contact switch	1	
5	3505301-R1001	制动手把压块	Brake handle pressure block	1	
6	3506310-R12	总泵到前轮制动油管总成	Master cylinder to front brake oil pipe assembly	1	
7	3506320-R21	左手刹到总泵制动油管总成	Left hand brake to master cylinder brake oil pipe assembly	1	
8	3505460-R21	输油管总成	Oil pipeline assembly	1	
9	3506330-R12	总泵到后轮制动油管总成	Master cylinder to rear brake oil pipe assembly	1	
10	3501010-R1001	左前制动钳总成	Left front brake caliper assembly	1	
11	3501015-R1001	左前制动钳分泵总成	Left front brake caliper cylinder assembly	1	
12	3501020-R1001	右前制动钳总成	Right front brake caliper assembly	1	
13	3501025-R1001	右前制动钳分泵总成	Front right brake caliper cylinder assembly	1	
14	3501032-R1001	前制动器摩擦片安装螺栓	Front brake friction plate installation bolts	4	
15	3506011-R1001	油封螺丝	Oil seal screw	3	
16	3506012-R1001	油封垫圈	Oil seal gasket	6	
17	3506304-R1021	前制动油管左支架	Front brake oil pipe left bracket	1	
18	3506302-R1021	前制动油管右支架	Front brake oil pipe right bracket	1	
19	3501030-R1001	前制动摩擦片 (修理包)	Front brake friction pad (repair kit)	1	
20	3504010-R12	制动踏板总成	Brake pedal assembly	1	


序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
21	3502010-R2001	左后制动钳总成	Left rear brake caliper assembly	1	
22	3502020-R2001	右后制动钳总成	Left rear brake caliper assembly	1	
23	3502030-R2001	后制动摩擦片 (修理包)	Rear brake friction pad (repair kit)	1	
24	3502015-R2001	左后制动钳分泵总成	Left rear brake caliper cylinder assembly	1	
25	Q146B0822	制动钳安装螺栓	Brake caliper mounting bolts	2	
26	3502025-R2001	右后制动钳分泵总成	Right rear brake caliper cylinder assembly	1	
27	3508030-R1013	驻车拉线总成	Parking cable assembly	1	配改进型方向把组件
28	3508021-R1012	驻车拉线前段	Front section of parking cable	1	配改进型方向把组件
29	3508022-R1011	驻车拉线固定盒	Parking cable fixing box	1	
30	3508031-R1011	驻车拉线后段	Rear section of parking cable	2	
31	3779020-R21	刹车开关	Brake switch	1	

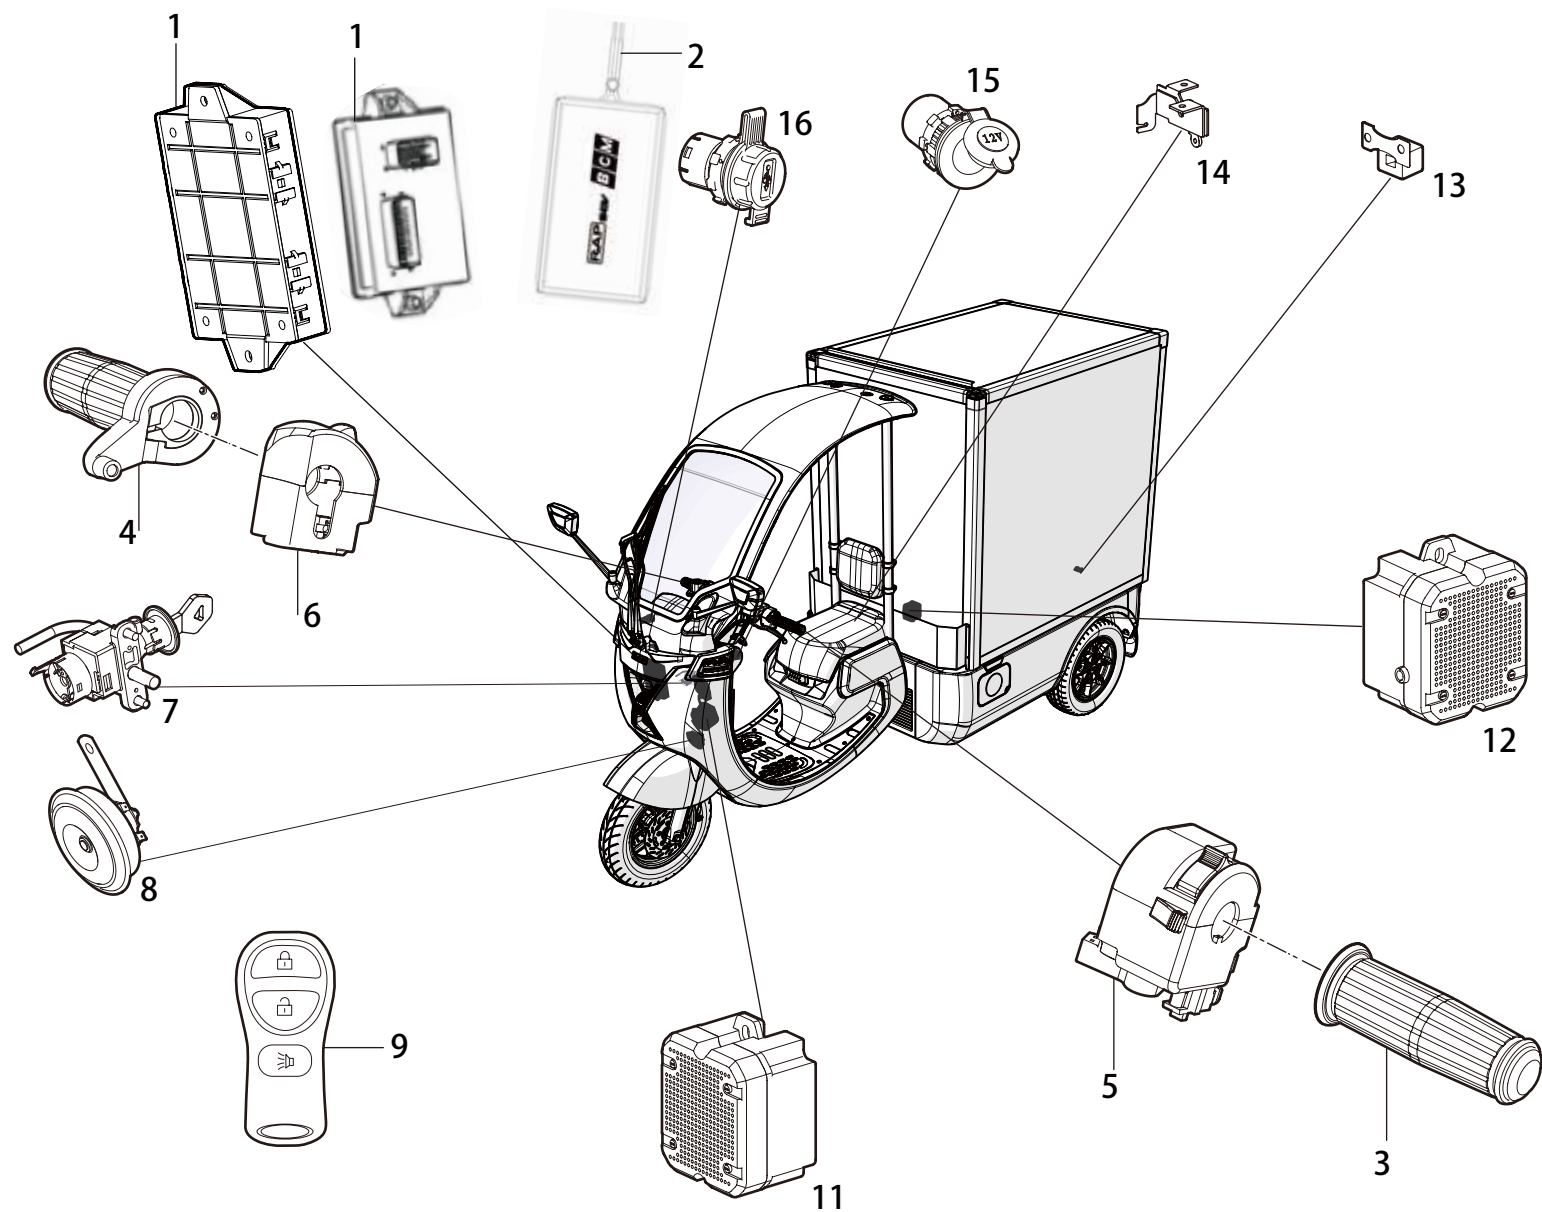




电器-电子装置 (Electrical appliances-Electronic devices)

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3683010-R1013	车身控制器总成	Body controller assembly	1	博电 (老) modelo antiguo
1	3683010-R1031	车身控制器总成	Body controller assembly	1	nuevo modelo 恒岭 (新)
	3683010-R1041	车身控制器总成	Body controller assembly	1	faro siempre encendido 灯常亮
2	3903050-R10	BCM防水套	BCM waterproof cover	1	博电用
3	3774030-R20	左把套总成	Left handlebar sleeve assembly	1	
4	3774040-R20	右转把总成	Right turn handle assembly	1	
5	3774010-R10	左组合开关总成	Left combination switch assembly	1	
6	3774020-R10	右组合开关总成	Right combination switch assembly	1	
7	3704010-R1001	电门锁总成	Electric door lock assembly	1	
8	3721010-R1001	高音喇叭总成	High pitched horn assembly	1	
9	3683050-R10	遥控器	Remote control	1	博电 (老) antiguo
	3683050-R1011	遥控器	Remote control	1	恒岭 (新) nuevo
10	3736020-R10	12V断电开关	12V power off switch	1	
11	7911020-R1042	声音模拟器总成	Sound Simulator Assembly	1	行人提示音
12	7911020-R10	后扬声器总成	Rear speaker assembly	1	pitido paetonal
13	3776010-R10	倒车后视摄像头总成 (带灯)	Reverse rearview camera assembly (with lights)	1	
	3776010-R1011	倒车后视摄像头总成 (不带灯)	Reverse rearview camera assembly (without lights)	1	
14	3704050-R10	坐垫锁总成	Seat cushion lock assembly	1	
15	7921010-R10	12V电源座总成	12V power socket assembly	1	
16	7921020-R1011	USB电源座总成	USB power socket assembly	1	

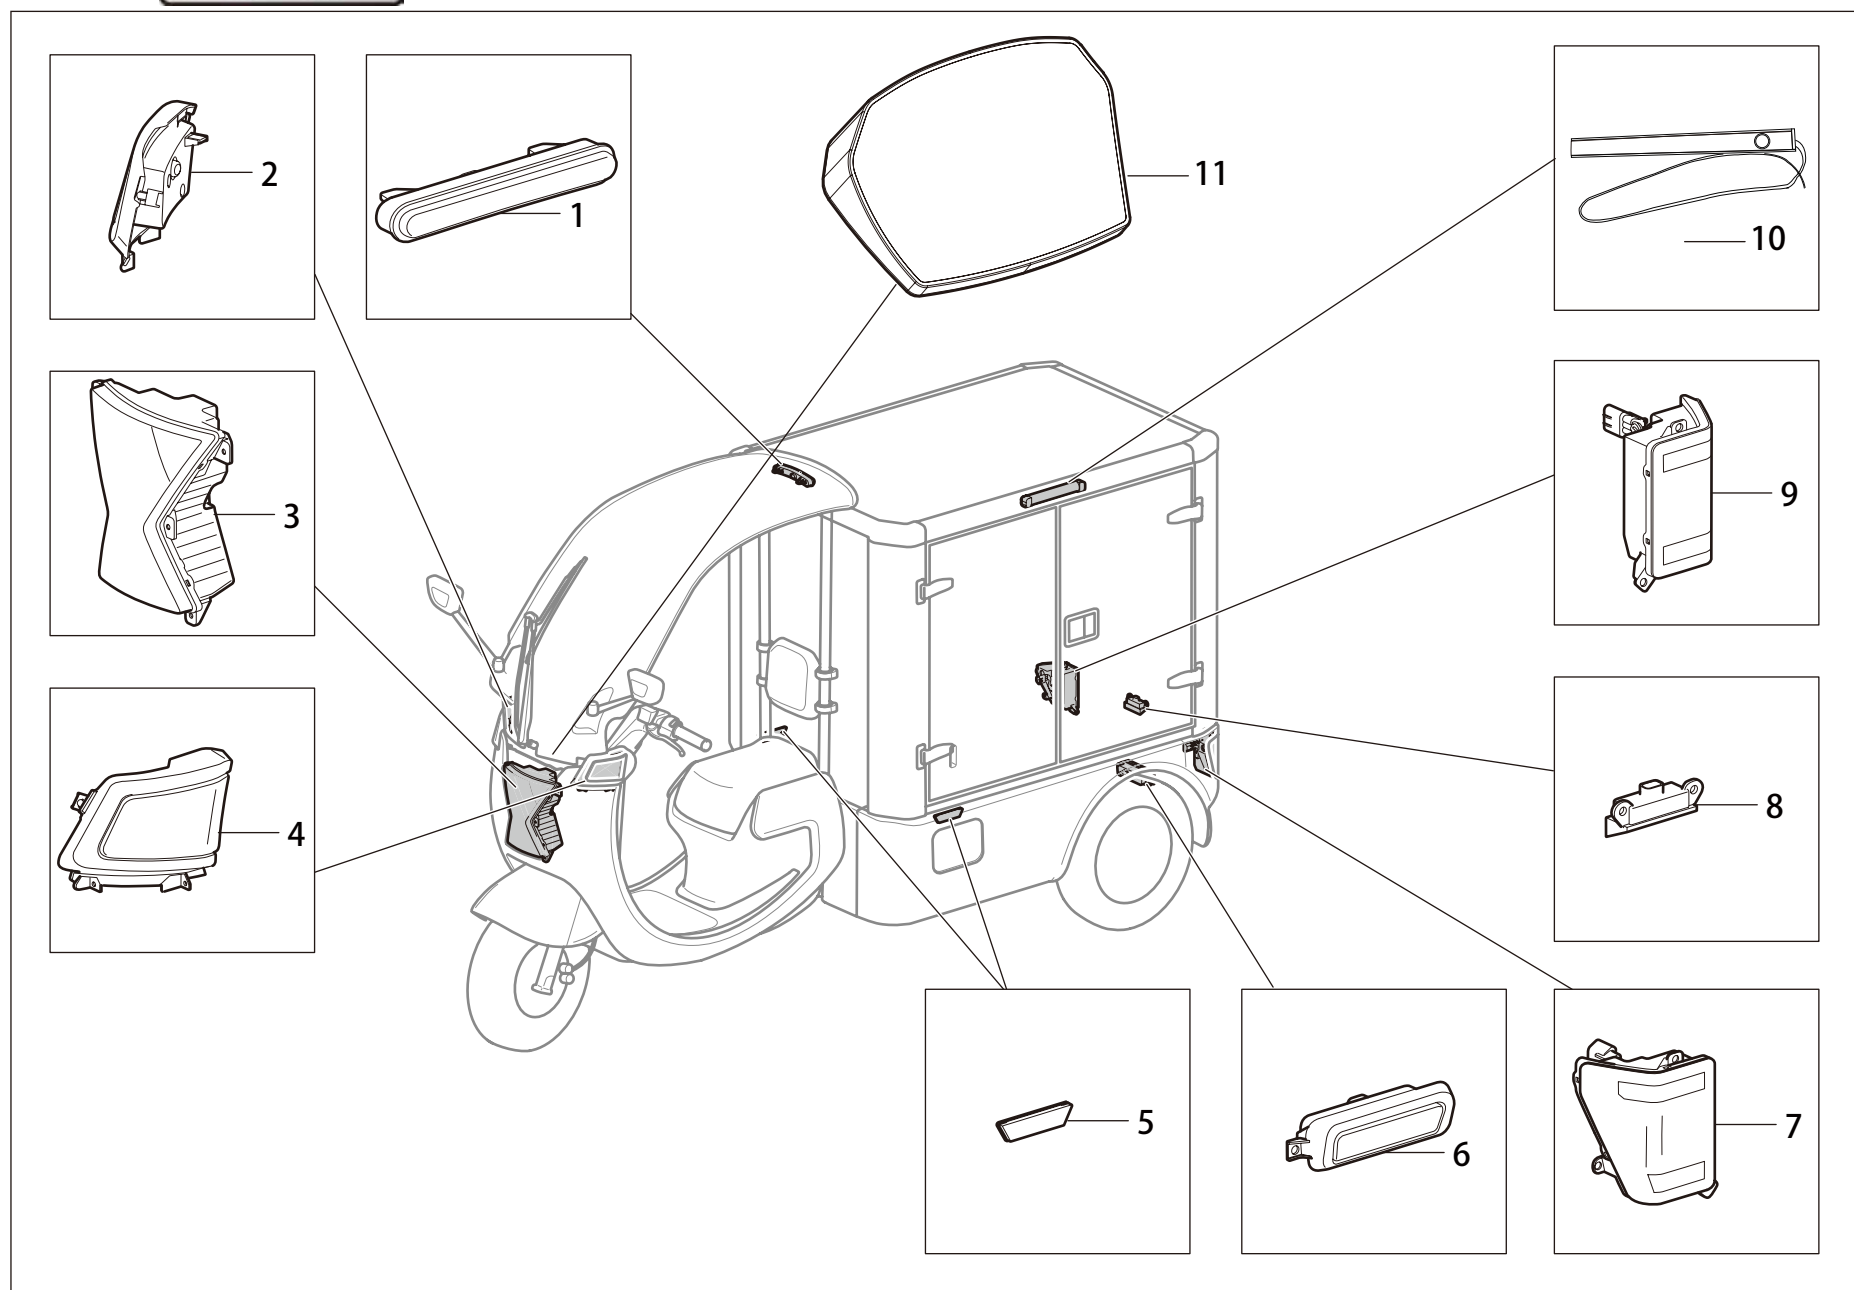



序号(NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	4134010-R10	高位制动灯总成	High position stop lamp assy	1	
2	4111020-R10	右前转向灯总成	Front right turn signal lamp assy	1	
3	4121010-R10	前组合灯总成	Front combined lamps assy	1	
4	4111010-R10	左前转向灯总成	Front left turn signal lamp assy	1	
5	4135010-R10	侧回复反射器	Side reflex reflector	2	
6	4116010-R10	后雾灯总成	Rear fog lamp assy	1	
7	4133010-R10	左后组合灯总成	Rear left combined lamps assy	1	
8	4108010-R10	后牌照灯总成	Rear registration plate lamp assy	1	
9	4133020-R10	右后组合灯总成	Rear right combined lamp assy	1	
10	8500366-R10	灯具	Cargo box lamp	1	
11	3820020-R12	组合仪表总成	Dashboard assy	1	

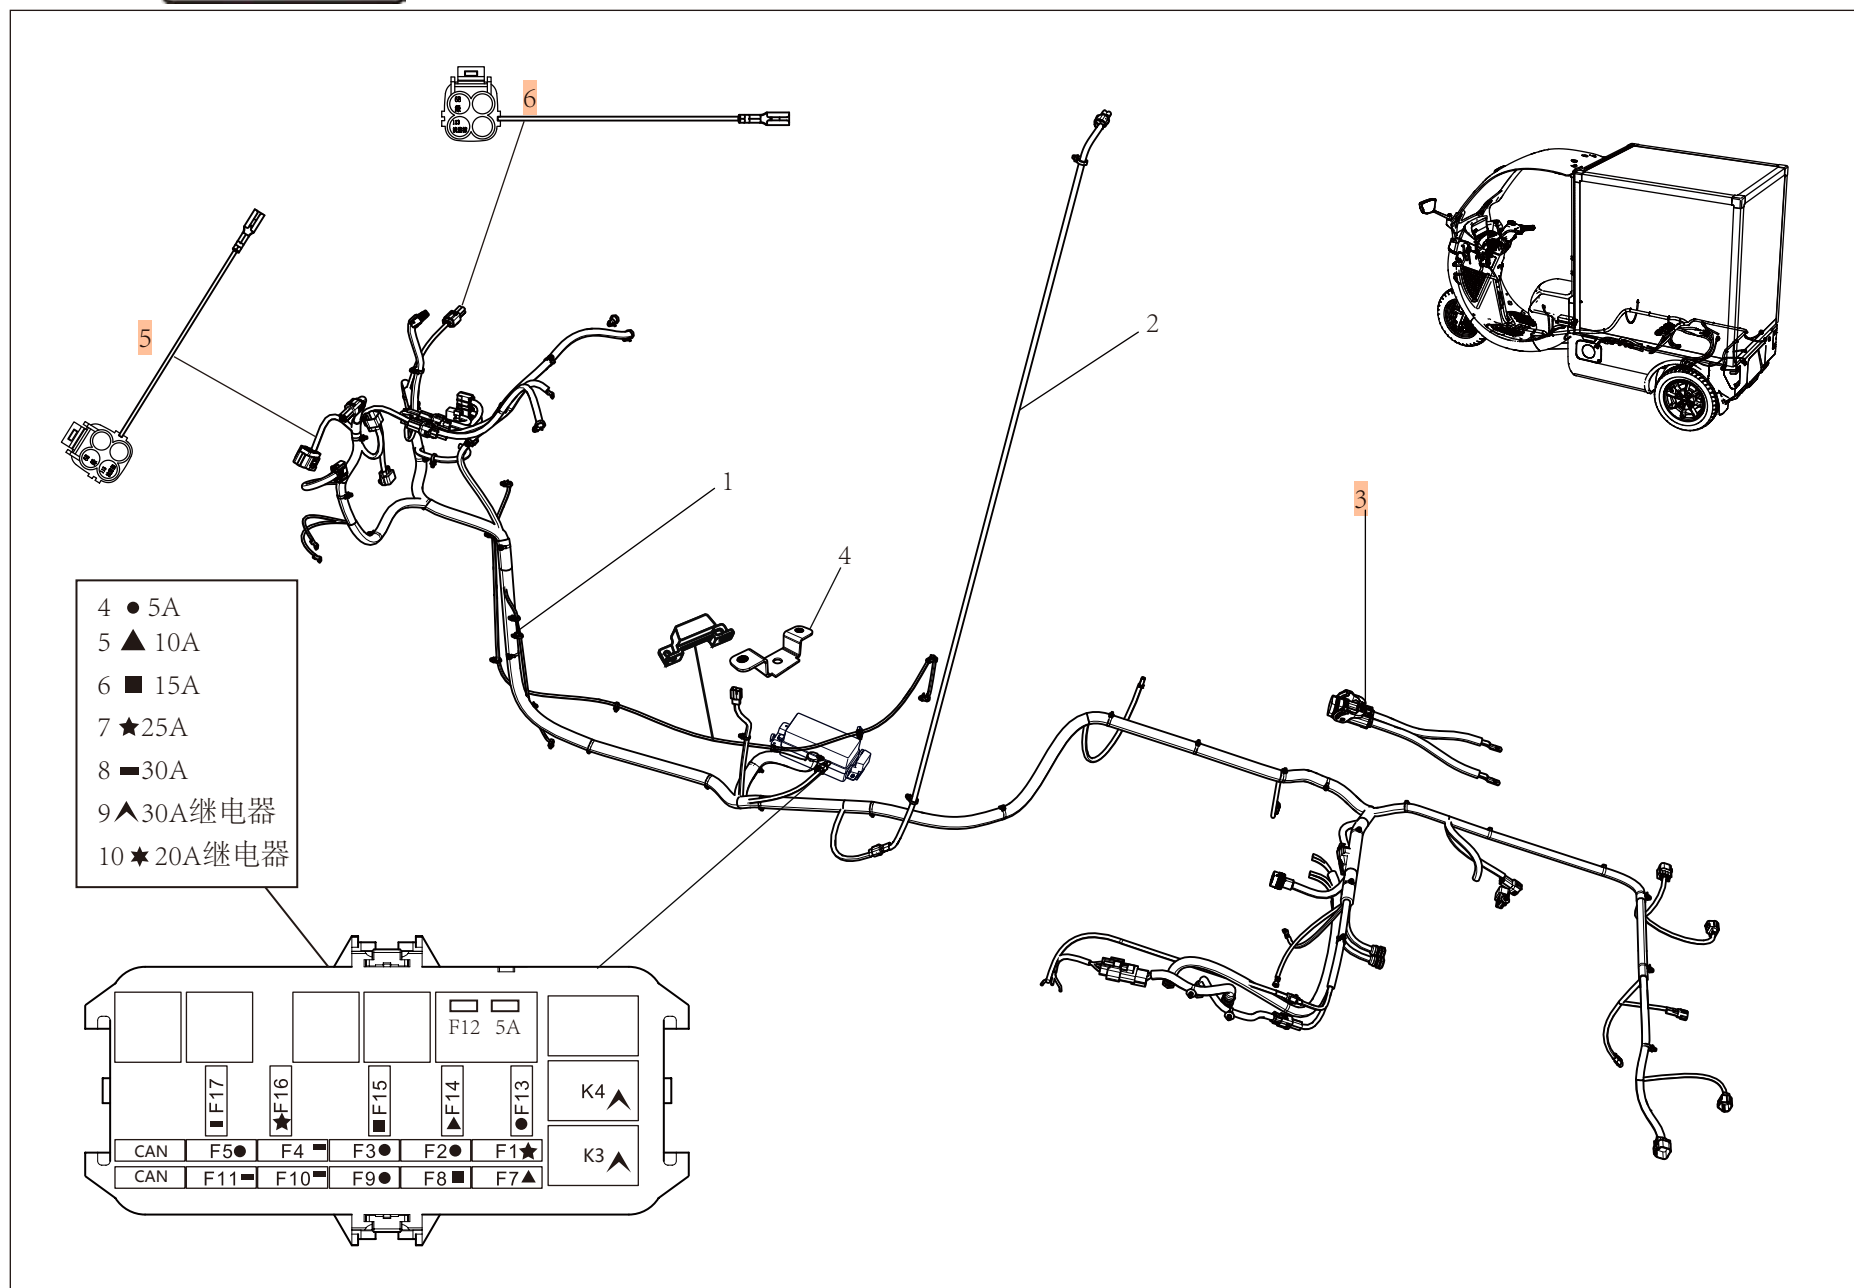




电器-电线束及保险盒Electrical appliance –Wire harness and Fuse block

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	4002010-R12	车身线束总成	Body harness assy	1	(配博电老BCM) antigo BCM
	4002010-R1212	车身线束总成	Body harness assy	1	(配横岭新BCM)
2	4002020-R10	高位制动灯线束总成	High position stop lamp harness assy	1	天宏锂电 NUOVO BCM
3	4019010-R12	动力线束总成	Power harness assy	1	BATERIA TIANHONG
4	3776025-R21	OBD诊断口支架	OBD diagnostic port bracket		
5	4002011-R11	左转向灯转接线	Left turn signal adapter cable	1	日本客户专用
6	4002012-R11	右转向灯转接线	Right turn signal adapter cable	1	日本客户专用


电器-保险丝盒

序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
4	4002013-R10	保险丝5A	Fuse 5A	5	F2 F3 F5 F9 F13
5	4002014-R10	保险丝10A	Fuse 10A	2	F14
6	4002016-R10	保险丝15A	Fuse 15A	2	F15
7	4002017-R11	保险丝25A	Fuse 25A	2	F1 F16
8	4002018-R11	保险丝30A	Fuse 30A	4	F4 F10 F11 F17
9	4002011-R10	继电器JD1927A	Relay JD1927A	2	K3 K4
10	4002012-R10	继电器N11	Relay N11	4	

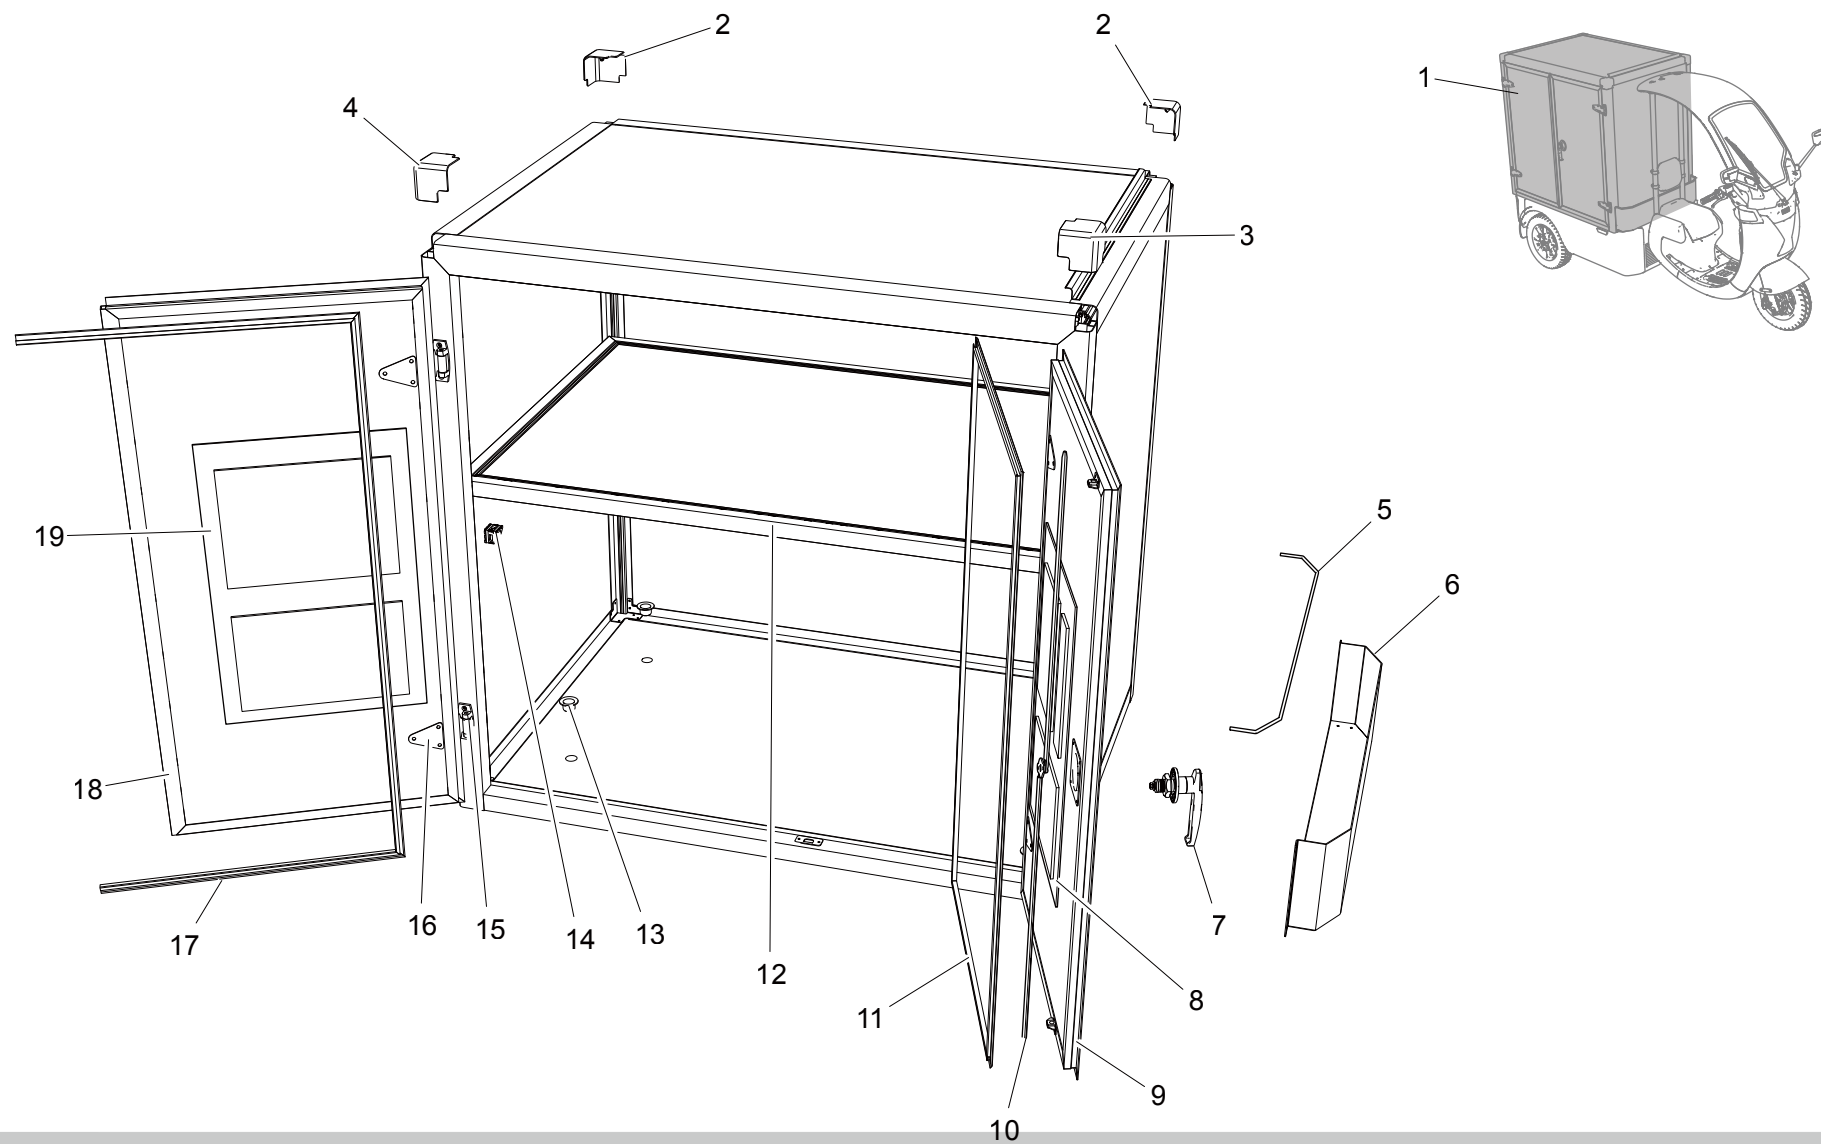




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	8500050-R11	货箱总成 (右开门)	Cargo box assembly (right door open)	1	新型材
2	8500129-R11	背板外包角	Back panel outer corner	2	
3	8500132-R11	门框右外包角	Right outer wrap angle	1	
4	8500131-R11	门框左外包角	Left outer corner	1	
5	8501108-R10	货箱前置物盒防护胶条	Protective tape for the front cargo box of the cargo box	1	
6	8501107-R10	货箱前置物盒	Front cargo box	1	
7	8500120-R1021	货箱锁	Box lock	1	
8	8501106-R10	小网兜	Small net pocket	1	
9	8500300-R11	货箱右门总成	Cargo box right door assembly	1	
10	8500305-R11	货箱锁杆总成	Cargo lock rod assembly	1	
11	8500304-R11	右门密封条	Right door sealing strip	1	
12	8500410-R11	分层隔板分总成	Layered partition sub assembly	1	
13	8500102-R1011	货箱安装加强块B	Reinforcement block B for cargo box installation	4	
14	8500414-R11	3030角铝	3030 angle aluminum	4	
15	8500130-R10	铰链	hinge	4	
16	8500382-R10	铰链内衬板	Hinge inner lining panel	4	
17	8500207-R11	左门密封条	Left door sealing strip	1	
18	8500200-R11	货箱左门总成	Cargo box left door assembly	1	
19	8501104-R10	大网兜	Big net bag	1	

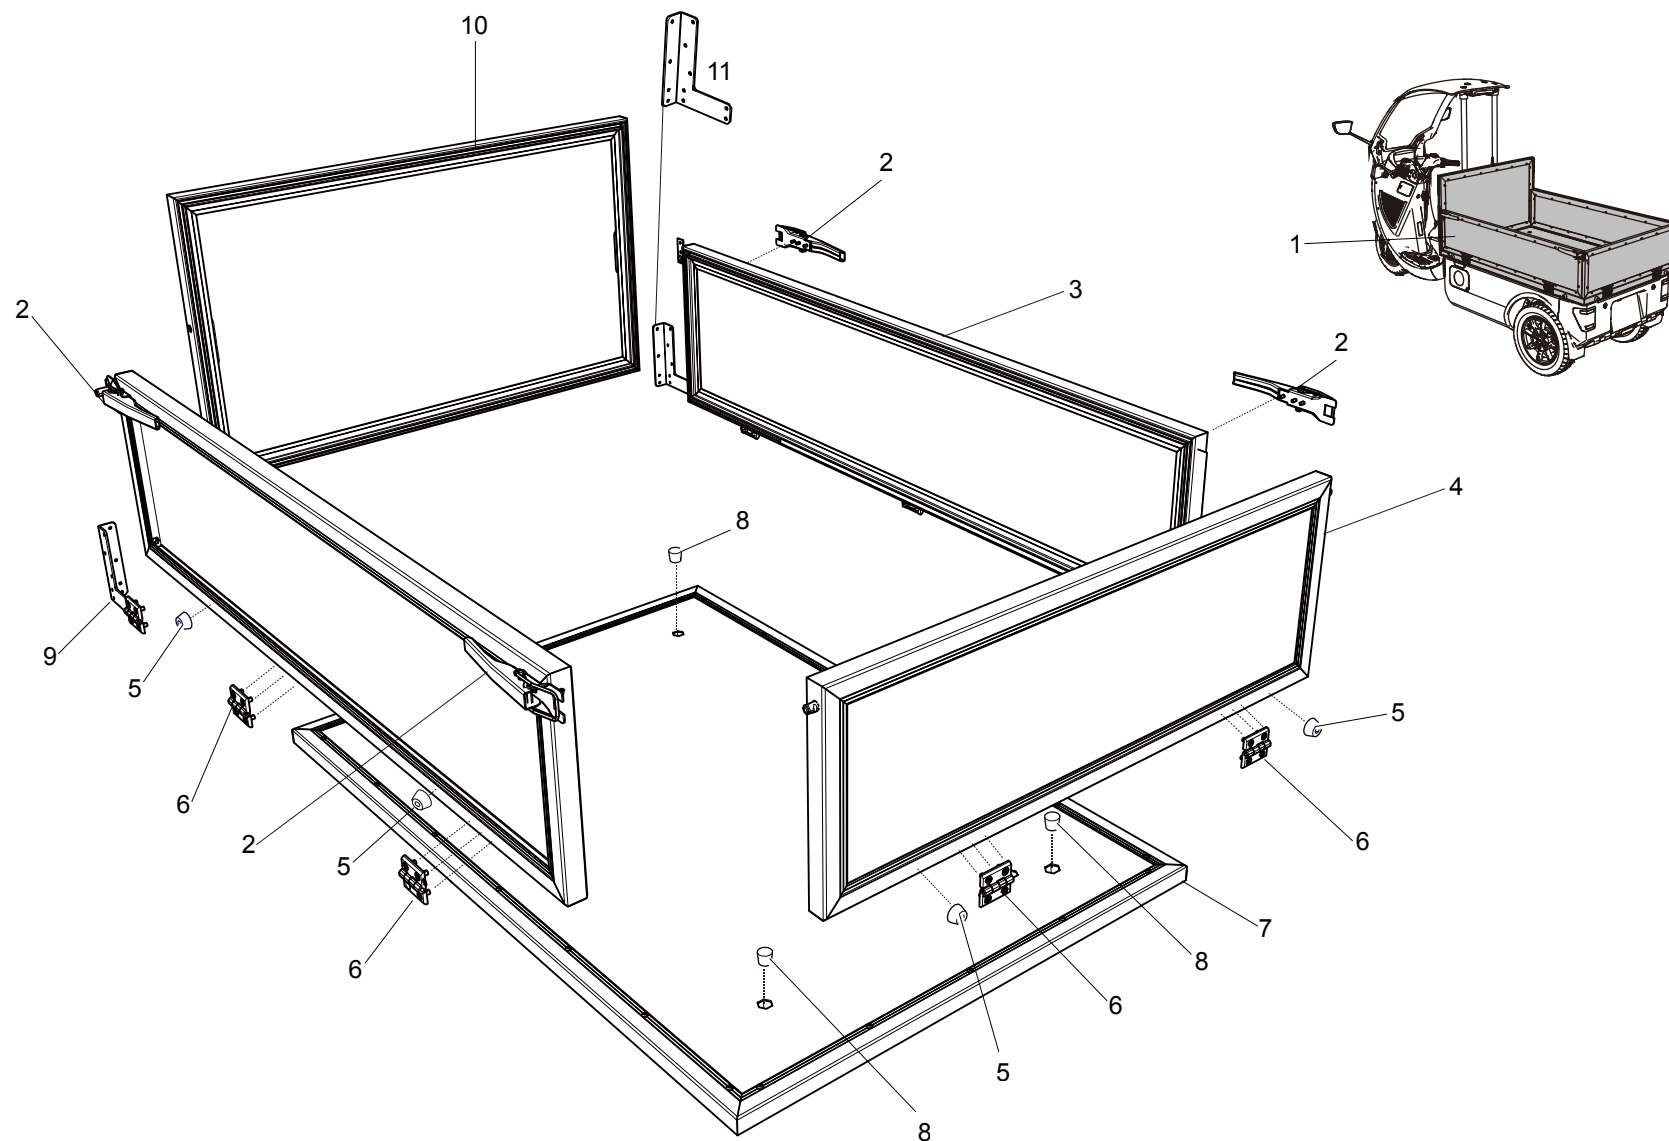




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	8500035-R11	货斗总成	Cargo hopper assembly	1	铝合金
2	8500855-R10	栏板锁扣	Fence lock catch	4	
3	8502010-R11	侧栏板总成	Side rail assembly	2	
4	8503010-R11	后栏板总成	Rear Fence Assembly	1	
5	8500827-R11	缓冲垫	Cushion	6	
6	8500025-R11	铝合金合页	Stainless steel hinge	6	
7	8501010-R11	底板总成	Bottom plate assembly	1	
8	8500821-R11	固定轴套	Fixed shaft sleeve	4	
9	8500823-R11	左前连接板	Left front connecting plate	1	
10	8504010-R11	前栏板总成	Front Fence Assembly	1	
11	8500824-R11	右前连接板	Right front connecting plate	1	

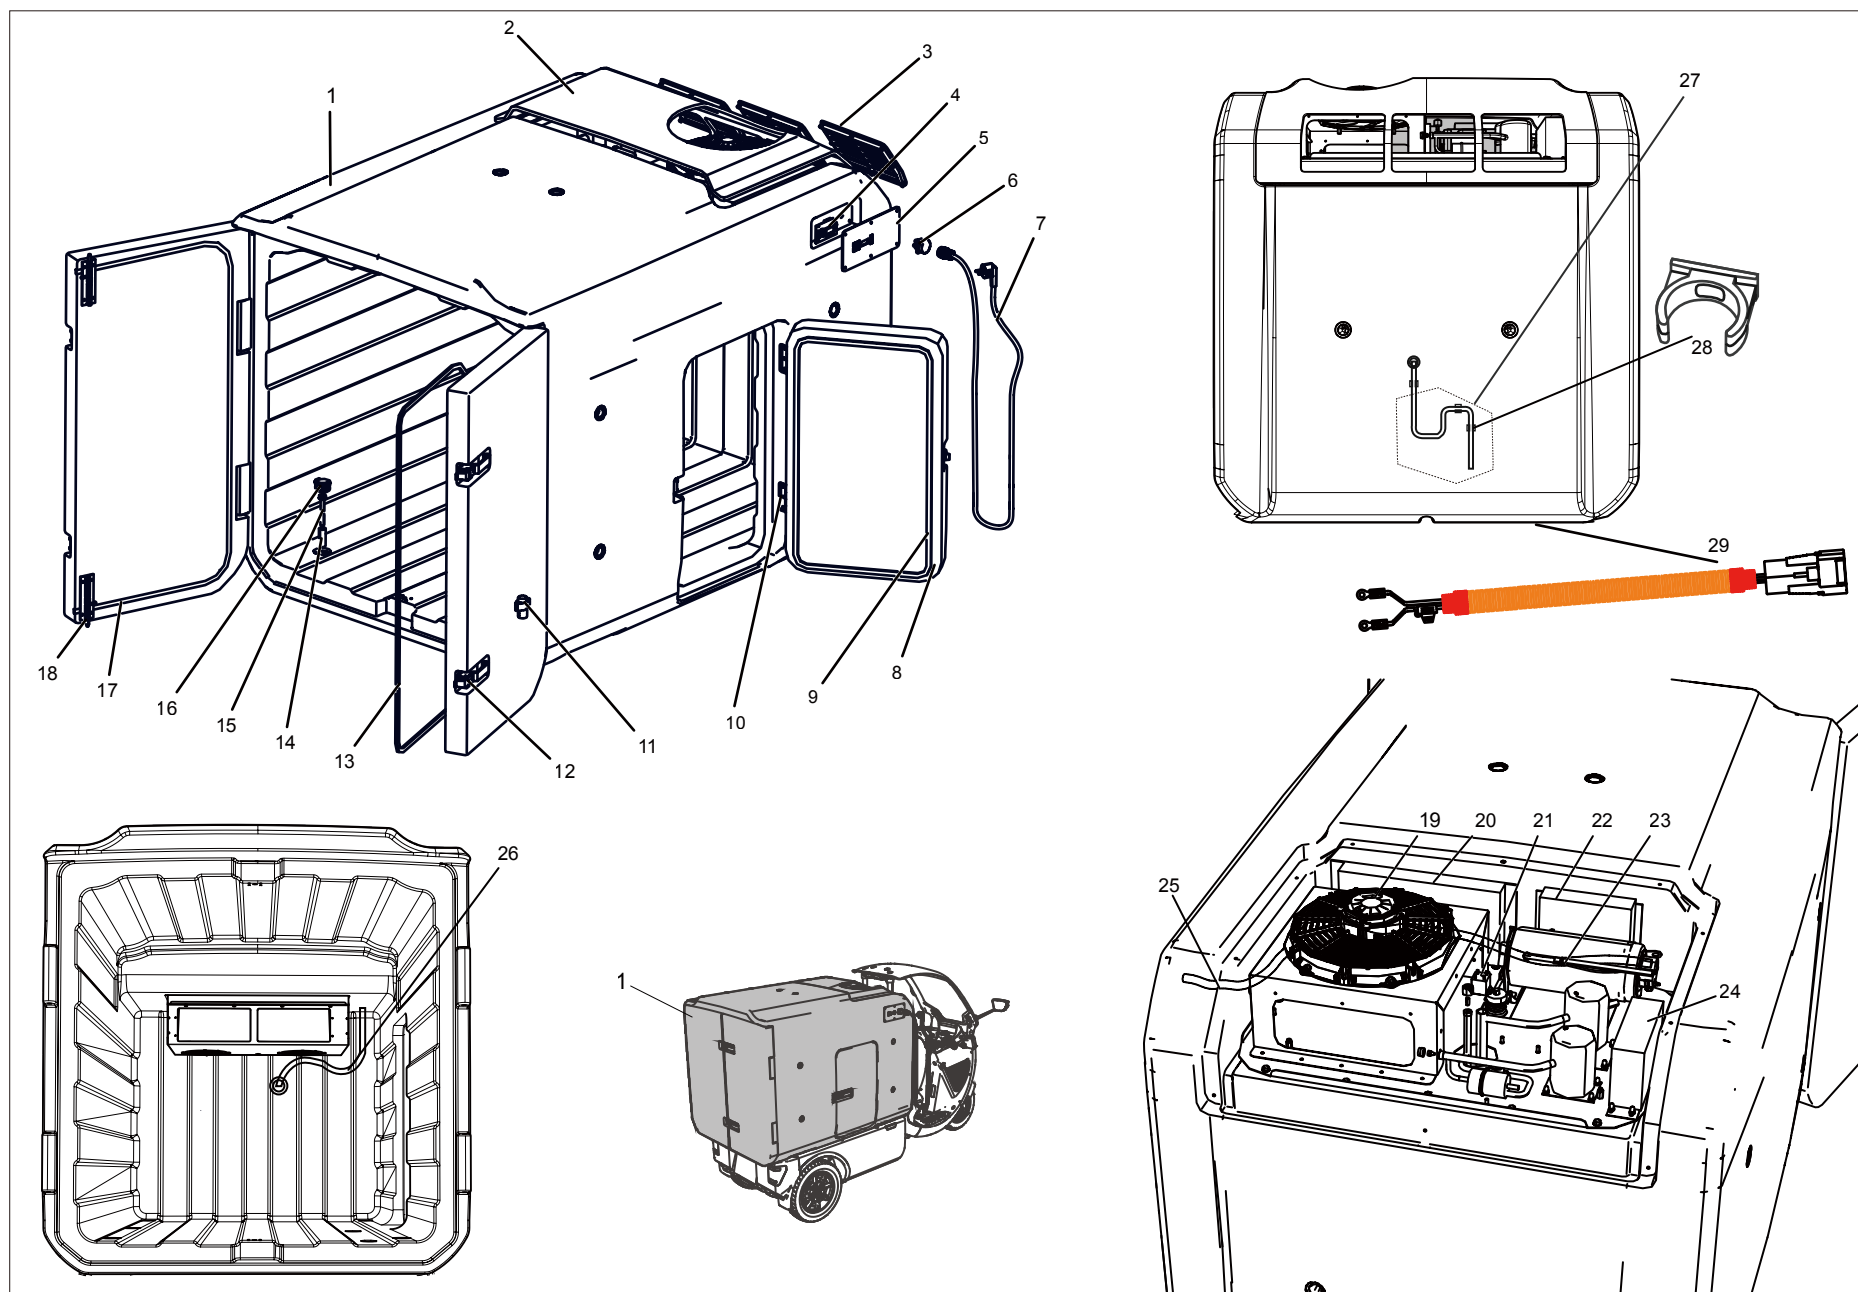


序号(NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	8520010-R11	冷冻箱总成	Freezer assembly	1	烯冷冷冻箱
2	8520011-R11	冷机罩	Cold hood	1	
3	8520012-R11	冷机网罩	Refrigerator hood	3	
4	8520015-R11	手抄器电路板	Hand reader circuit board	1	
5	8520013-R11	控制面板	Control panel	1	
6	8520105-R11	航空插座	Aviation socket	1	
7	8520110-R11	市电电源线	Mains power cord	1	
8	8520014-R11	侧门	Side door	1	
9	8520016-R11	侧门胶条	Side door adhesive strip	1	
10	8520017-R11	侧门铰链	Side door hinge	2	
11	8520115-R11	排水塞	Drain plug	1	
12	8520120-R11	门锁	Door lock	3	
13	8520018-R11	后右门胶条	Rear right door rubber strip	1	
14	8520019-R11	固定衬套	Fixed bushing	4	
15	8520101-R11	固定螺栓	Fixed bolt	4	
16	8520102-R11	固定孔橡胶盖	Fixed hole rubber cover	6	
17	8520103-R11	后左门胶条	Rear left door rubber strip	1	
18	8520150-R11	后左门栓	Rear left door bolt	2	
19	8520125-R11	冷凝风机	Condensation fan	1	
20	8520130-R11	市电模块	Mains module	1	
21	8520135-R11	继电器	relay	1	
22	8520140-R11	DC72V-DC48V	DC72V-DC48V	1	
23	8520104-R11	压缩机排气温度探头	Compressor exhaust temperature probe	1	
24	8520145-R11	控制器	controller	1	
25	8520025-R11	手抄器线束	Hand reading machine harness	1	
26	8520116-R11	钢丝软管	wired hose	1	
27	8520155-R11	排水PVC管总成	Drainage PVC pipe assembly	1	
28	8520117-R11	排水PVC管夹	Drainage PVC pipe clamp	1	
29	8500520-R10	冷冻厢72V电源连接线	72V power supply connection line for freezer compartment	1	

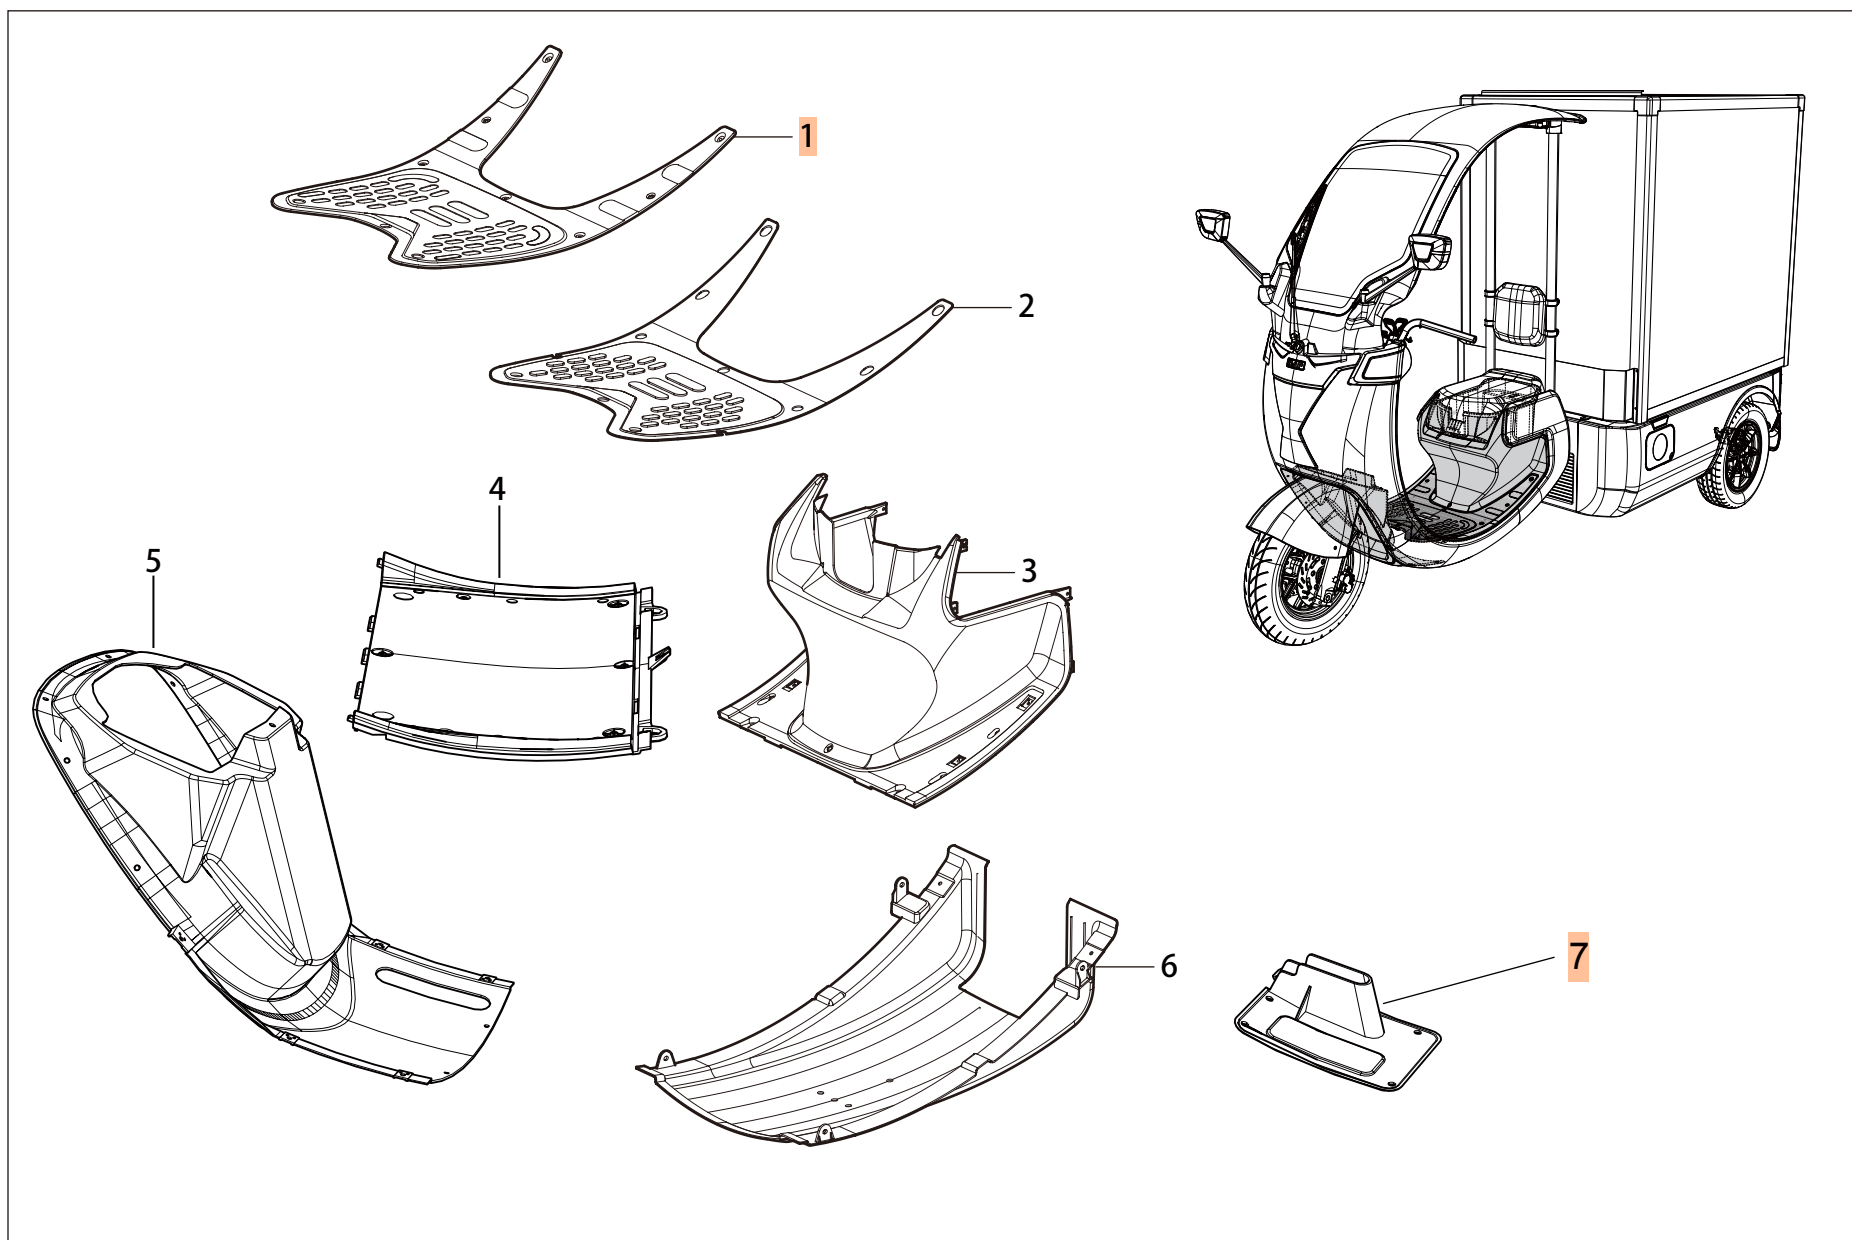




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	5102012-R1001	脚踏板装饰板	Pedal trim panel	1	
2	5102011-R10	脚踏板橡胶垫	Pedal rubber mat	1	
3	6802012-R10	坐垫下罩	Seat lower cover	1	
4	5107011-R10	脚踏板安装板	Pedal mounting panel	1	
5	5173011-R1001	车体前下护板	Front body inner lower fender	1	
6	5173012-R1001	车体后下护板	Front body inner bottom fender	1	
7	5173013-R12	车体下检修板	Under body maintenance panel	1	

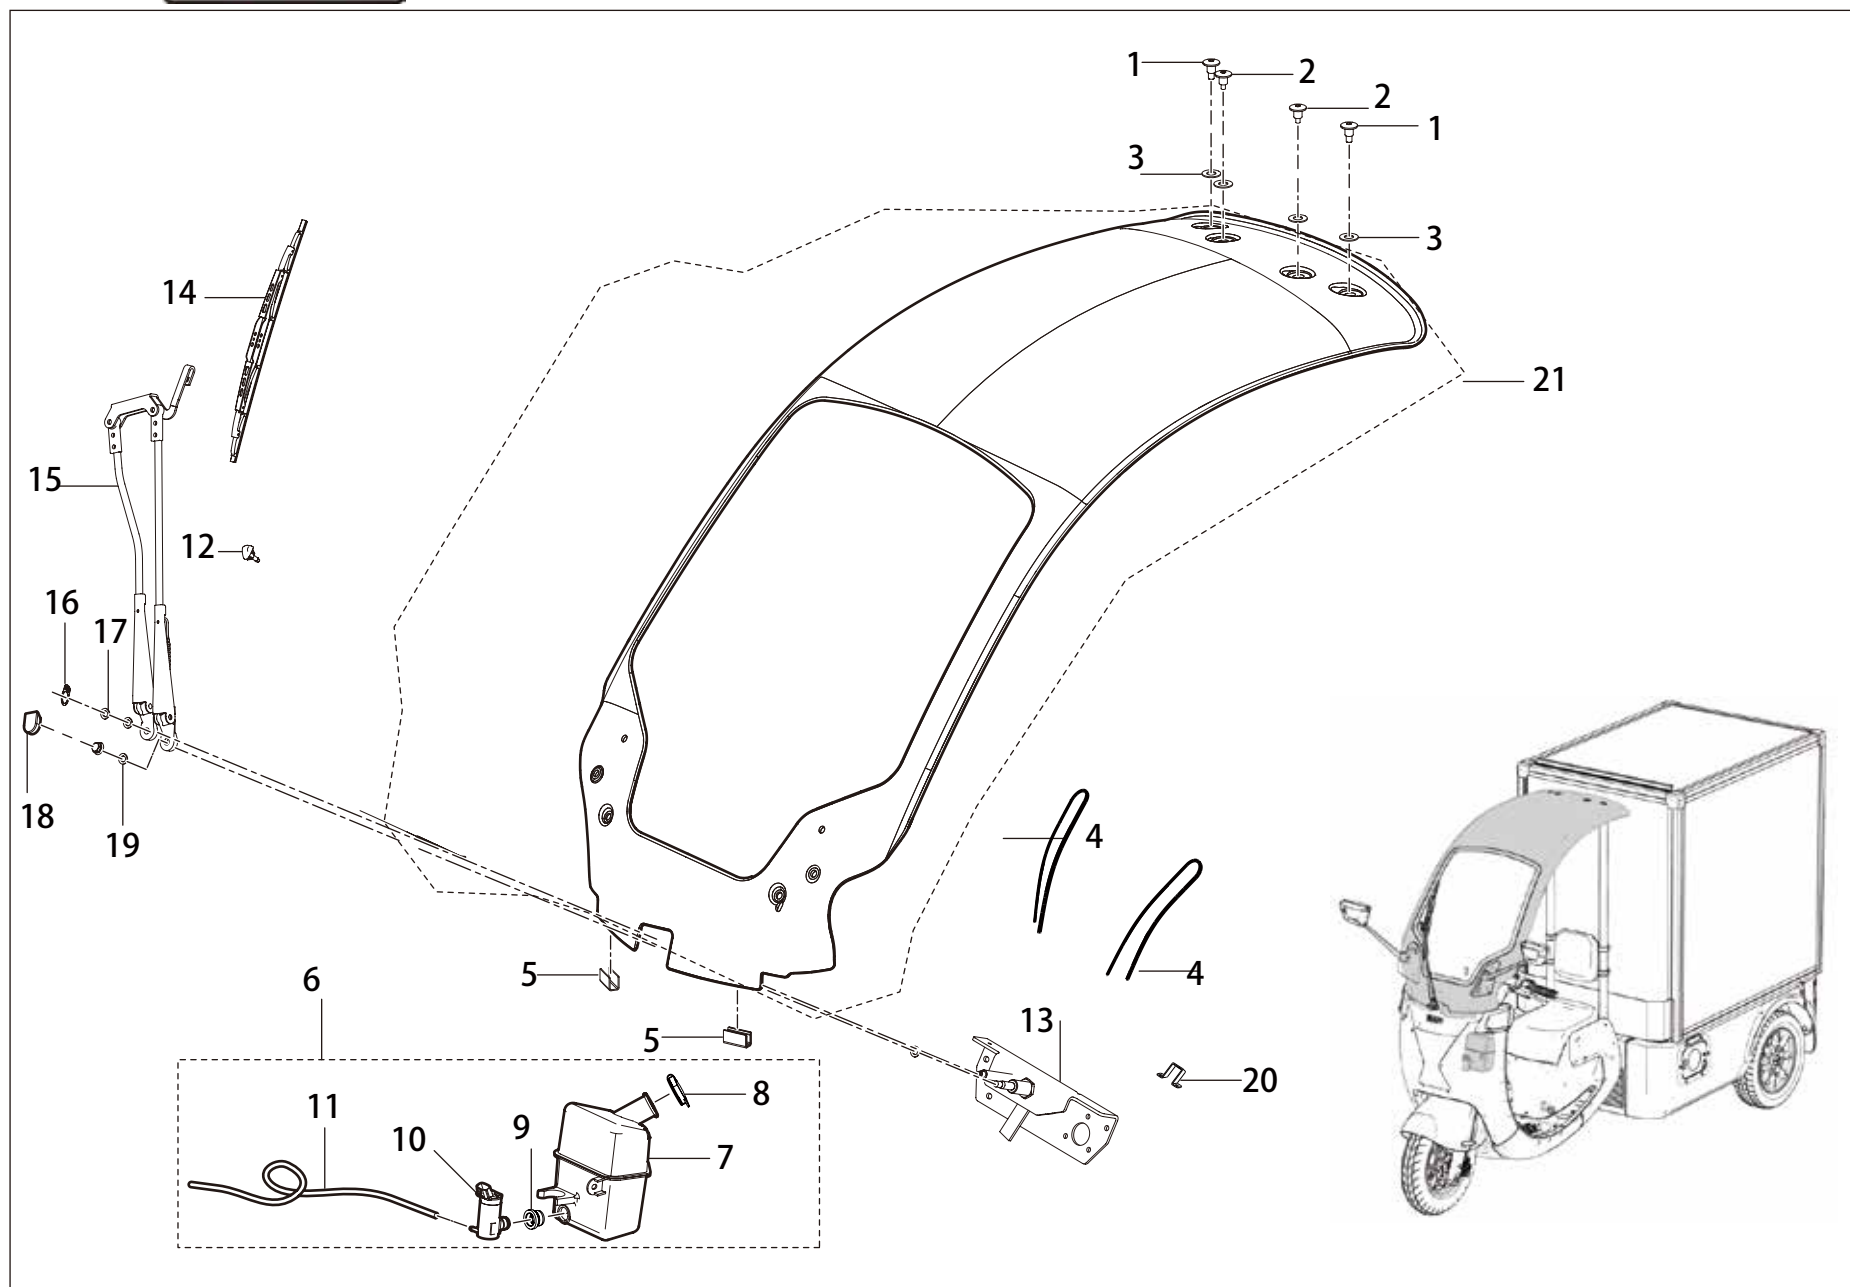


序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	5206103-R10	台阶螺栓	Step bolt	2	M8×33
2	5206104-R1001	台阶螺栓	Step bolt	2	M6×16
3	5206109-R10	橡胶垫	Rubber pad	4	M14×28×1.5
4	5206108-R1012	风挡上支架橡胶条	Windshield upper bracket rubber strip	2	
5	5206107-R1001	风挡下托架橡胶条	Windshield lower bracket rubber strip	2	
6	5207010-R10	洗涤壶带电机总成	Washing kettle with motor assembly	1	
7	5207012-R10	洗涤壶	Washing kettle	1	
8	5207015-R10	洗涤壶口盖	Washing pot mouth cover	1	
9	5207016-R10	洗涤电机胶垫	Washing motor rubber pad	1	
10	5207013-R10	洗涤电机	Washing motor	1	
11	5207014-R10	喷水软管	Water spray hose	1	
12	5207011-R10	前喷嘴	Front nozzle	1	
13	5205010-R1021	雨刮电机及连杆总成	Wiper motor and connecting rod assembly	1	
14	5205030-R10	前刮片总成	Front scraper assembly	1	
15	5205020-R1011	前刮臂总成	Front wiper arm assembly	1	
16	5205022-R10	φ 5.5 外卡簧	φ 5.5 External circlip	1	
17	5205024-R10	φ 6 波浪垫片	φ 6 Wave gasket	1	
18	5205021-R1011	雨刮装饰帽	Wiper decorative cap	2	
19	5205023-R10	φ 6*11*1.0 平垫	φ 6 * 11 * 1.0 flat pad	2	
20	5205026-R10	仪表安装板支架	Instrument mounting plate bracket	1	
21	5206100-R20	顶棚总成 (带玻璃)	Ceiling assembly (with glass)	1	

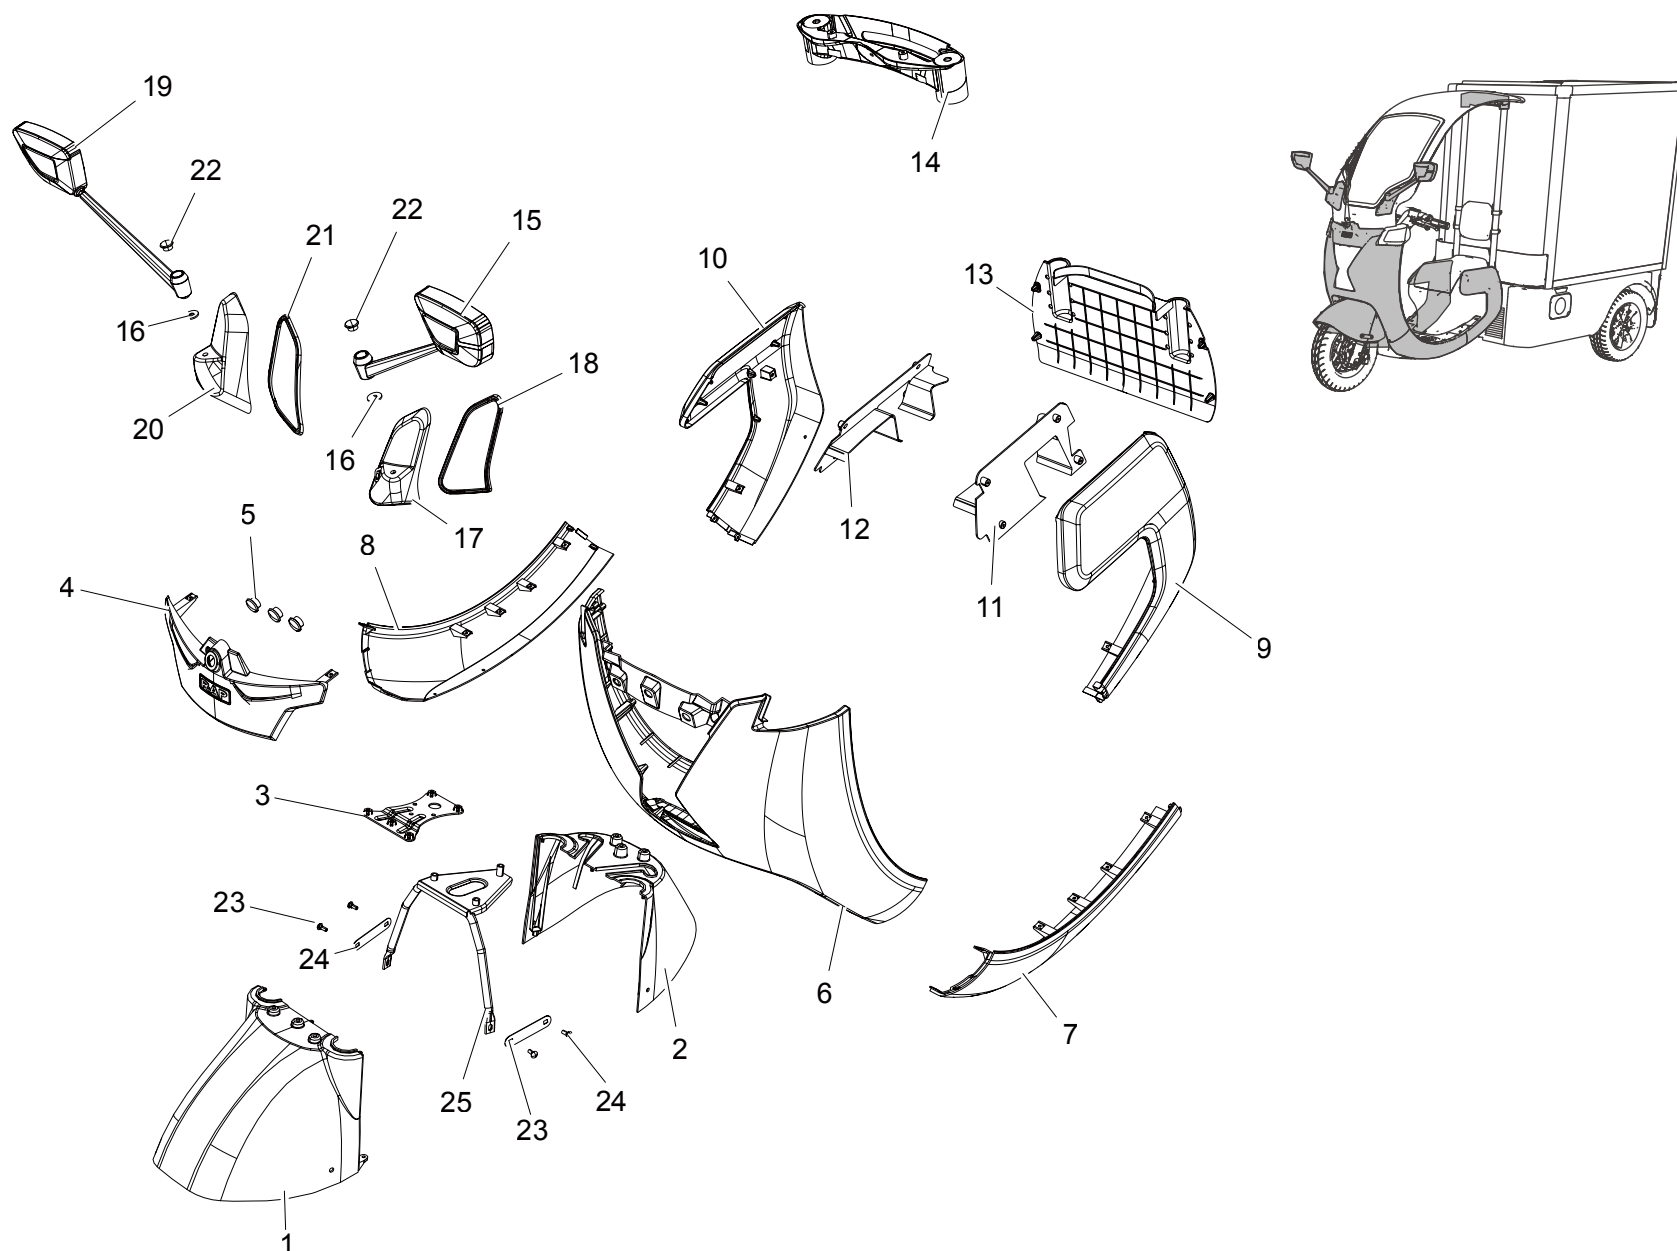




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3102011-R10	前轮罩前部	Front of front wheel housing	1	
2	3102012-R10	前轮罩后部	Rear of front wheel housing	1	
3	3102013-R1001	前轮罩连接板组件	Front wheel housing connecting plate assembly	1	
4	5302010-R10	前装饰面罩总成	Front decorative mask assembly	1	
5	5302023-R10	前装饰面板橡胶圈	Front decorative panel rubber ring	3	
6	5302011-R10	前装饰面板	Front decorative panel	1	
7	5302013-R10	左装饰边条	Left decorative edge strip	1	
8	5302014-R10	右装饰边条	Right decorative edge strip	1	
9	5302017-R10	左后装饰边条	Left rear decorative edge strip	1	
10	5302018-R10	右后装饰边条	Right rear decorative edge strip	1	
11	5302021-R10	左后装饰边条内衬板	Left rear decorative strip inner panel	1	
12	5302022-R10	右后装饰边条内衬板	Rear right decorative edge strip inner panel	1	
13	5302012-R10	后挡板	Tailgate	1	
14	5301020-R10	高位灯安装板	High mounted lamp mounting plate	1	
15	8202015-R10	左后视镜本体	Left rearview mirror body	1	
16	8202024-R1011	后视镜底座胶垫	Rear view mirror base rubber pad	2	
17	8202030-R1012	左后视镜底座	Left rearview mirror base	1	
18	8202012-R10	左后视镜底座胶条	Left rearview mirror base adhesive strip	1	
19	8202025-R10	右后视镜本体	Right rearview mirror body	1	
20	8202040-R1012	右后视镜底座	Right rearview mirror base	1	
21	8202023-R10	右后视镜底座胶条	Right rearview mirror base adhesive strip	1	
22	8202026-R10	后视镜堵盖	Rear view mirror cover	2	
23	3102017-R10	前轮罩连接片	Front wheel housing connecting piece	2	
24	3102019-R10	圆头方径螺栓	Round head square diameter bolt	4	M6X20
25	3102014-R1011	前轮罩加强支架	Front wheel housing reinforcement bracket	1	

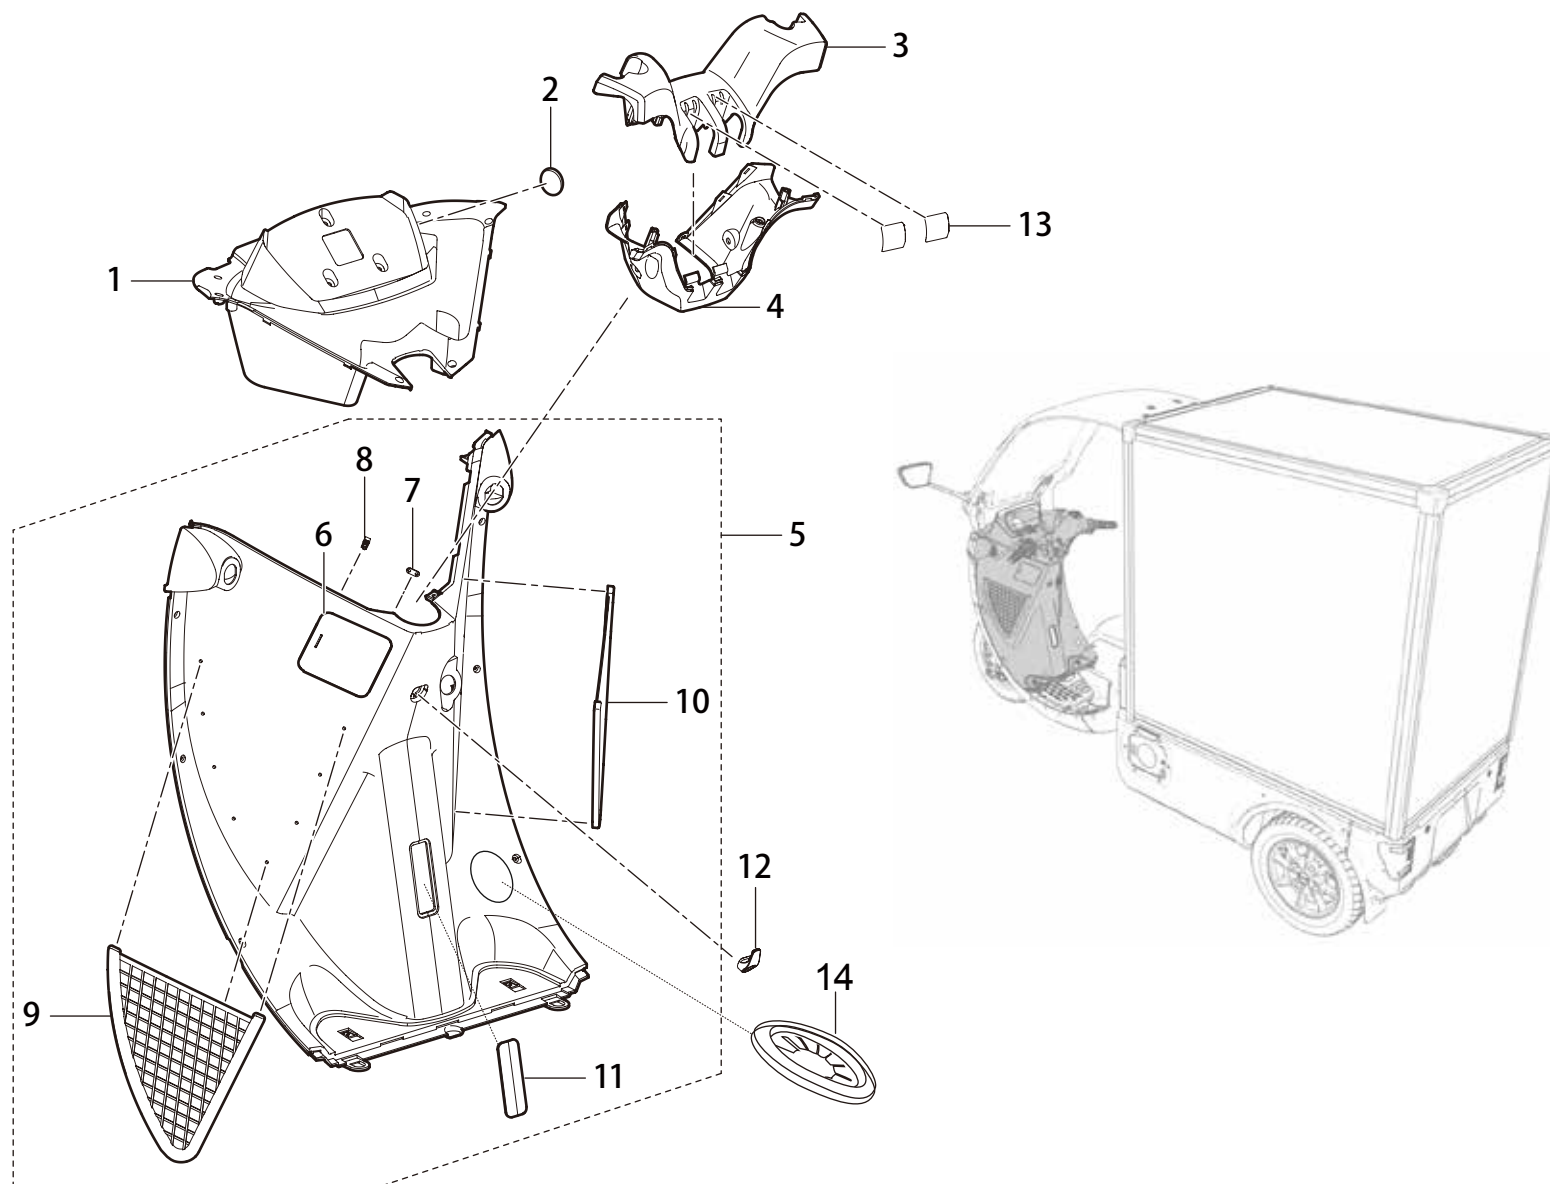




车身及附件-内护板总成Bodywork and accessories -Inner fender assembly

序号(NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	5306010-R1011	仪表安装板	Dashboard mounting panel	1	
2	5306012-R10	仪表安装板堵盖	Dashboard mounting cap	1	
3	5305011-R1021	把罩上盖	Handlebar upper cover	1	
4	5305012-R1011	把罩下盖	Handlebar lower cover	1	
5	5301100-R10	内护板总成	Inner fender assy	1	
6	5301111-R10	水壶口翻盖	Cover on windshield washer assy	1	
7	5301113-R10	翻转轴压板	Inner left mount plate for washer cover	1	
8	5301115-R10	插接开关	Inner right plastic connector for washer cover	1	
9	5301103-R10	内护板左安装网兜	Left hollow storage bag	1	
10	5301104-R10	内护板右安装网兜	Right hollow storage bag	1	
11	5301114-R10	车架号码盖	VIN cover	1	
12	8226011-R10	挂钩	Hook	1	
13	5305014-R10	手柄减震垫	Parking and tilt lock lever cushion	2	
14	5301102-R21	脚踏板胶圈	Foot pedal rubber ring	1	

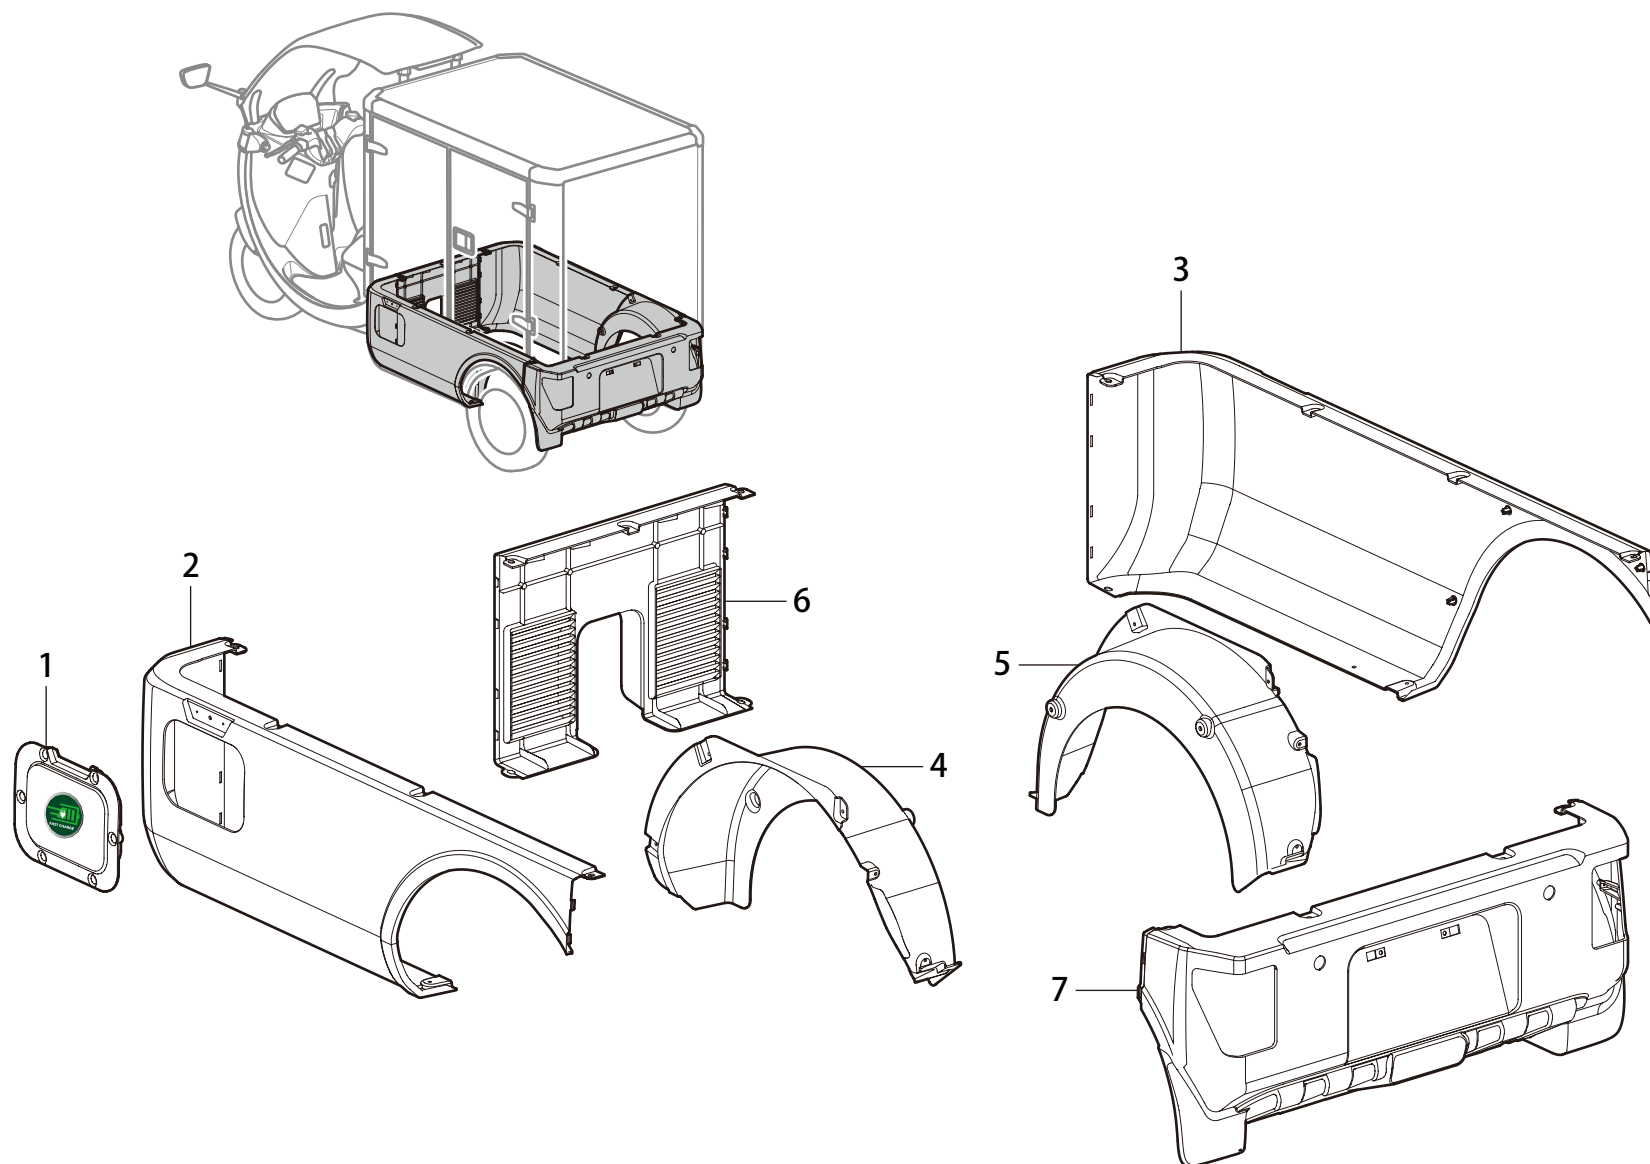




序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	5601015-R1011	充电口总成	Charge interface assy	1	
2	5402011-R10	车架左围板	Rear body left mounting panel	1	
3	5402012-R10	车架右围板	Rear body right mounting panel	1	
4	5402016-R10	侧围左挡泥皮	Rear body left fender	1	
5	5402017-R10	侧围右挡泥皮	Rear body right fender	1	
6	5602011-R10	后车架前围板	Rear body front mounting panel	1	
7	5602012-R10	后车架后围板	Rear body rear mounting panel	1	

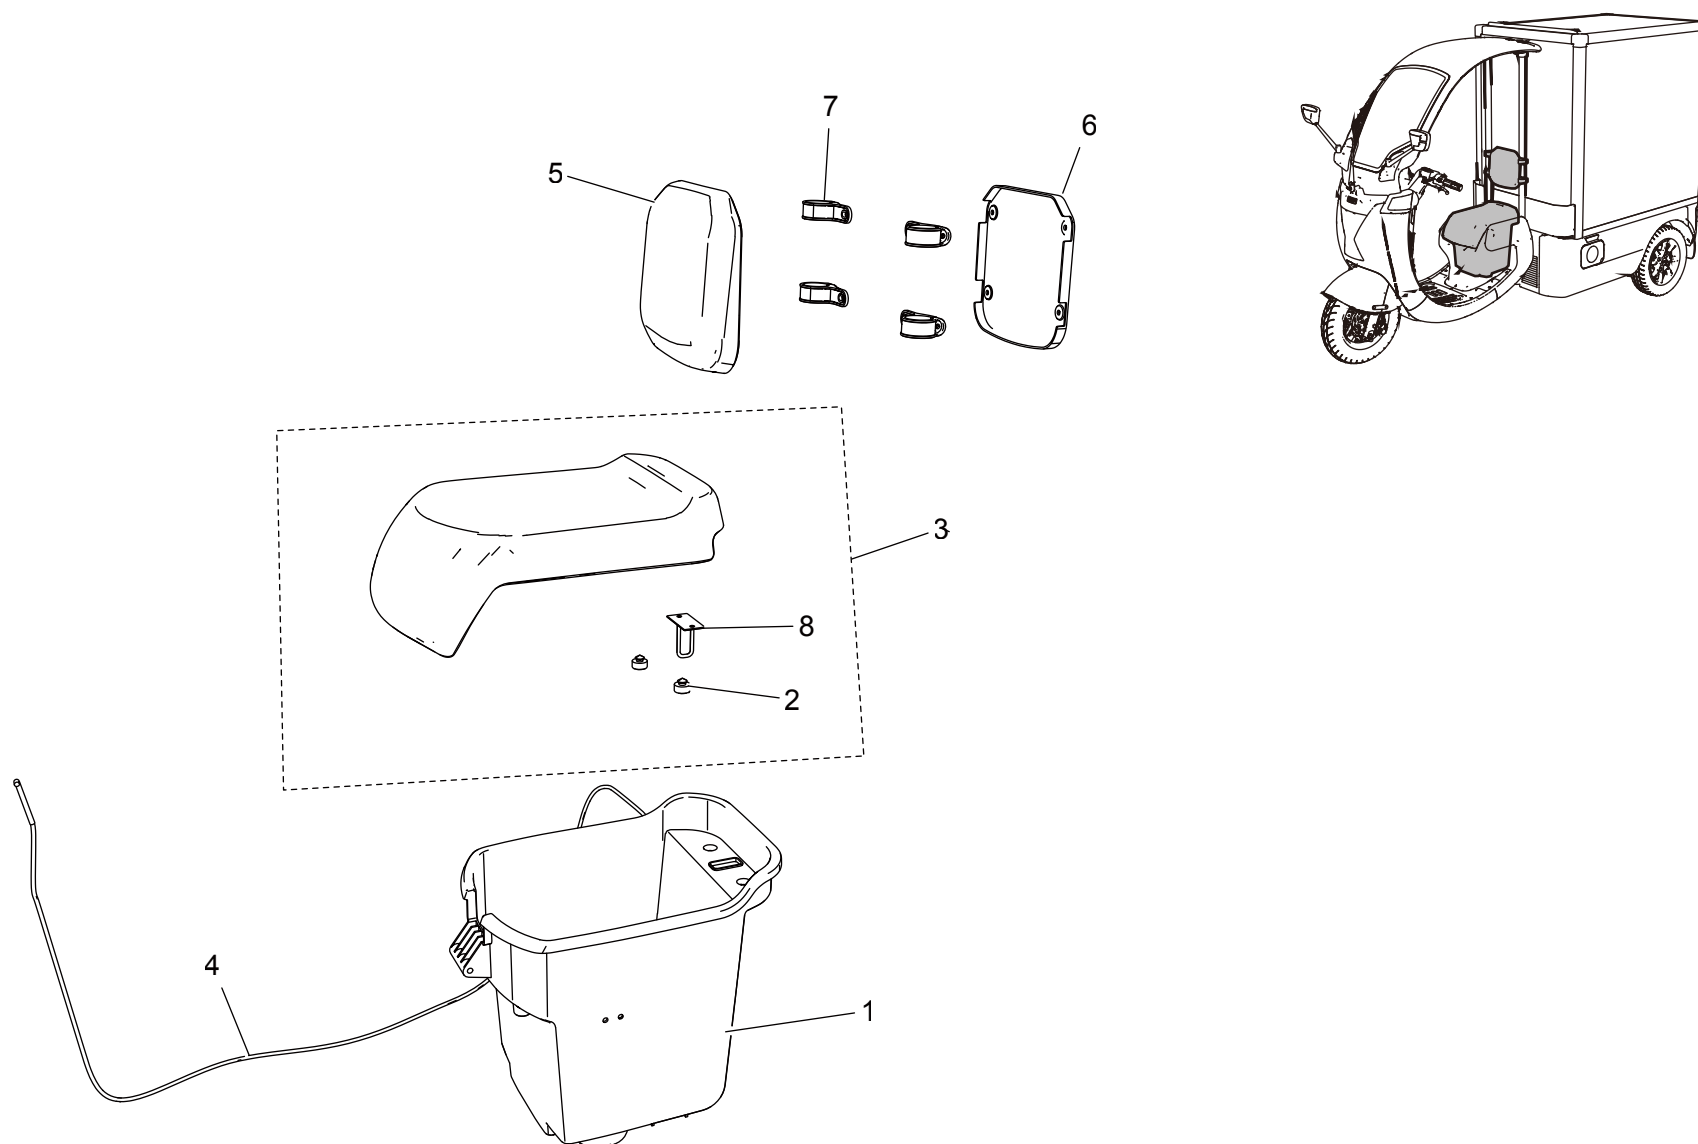







序号(NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	6802011-R10	置物箱	Storage box	1	
2	6803103-R10	坐垫胶垫	Cushion rubber cushion	2	
3	6803200-R1002	坐垫总成	seat ASSY	1	
4	6804010-R1011	坐垫锁拉线	Seat cushion lock cable	1	
5	6805100-R1001	靠背本体总成	Backrest body assembly	1	
6	6805103-R10	靠背后盖	Backrest cover	1	
7	6805206-R10	座椅靠背可调节固定支架	Adjustable fixed bracket for seat backrest	4	
8	6803210-R10	坐垫挂钩	Cushion hook	1	

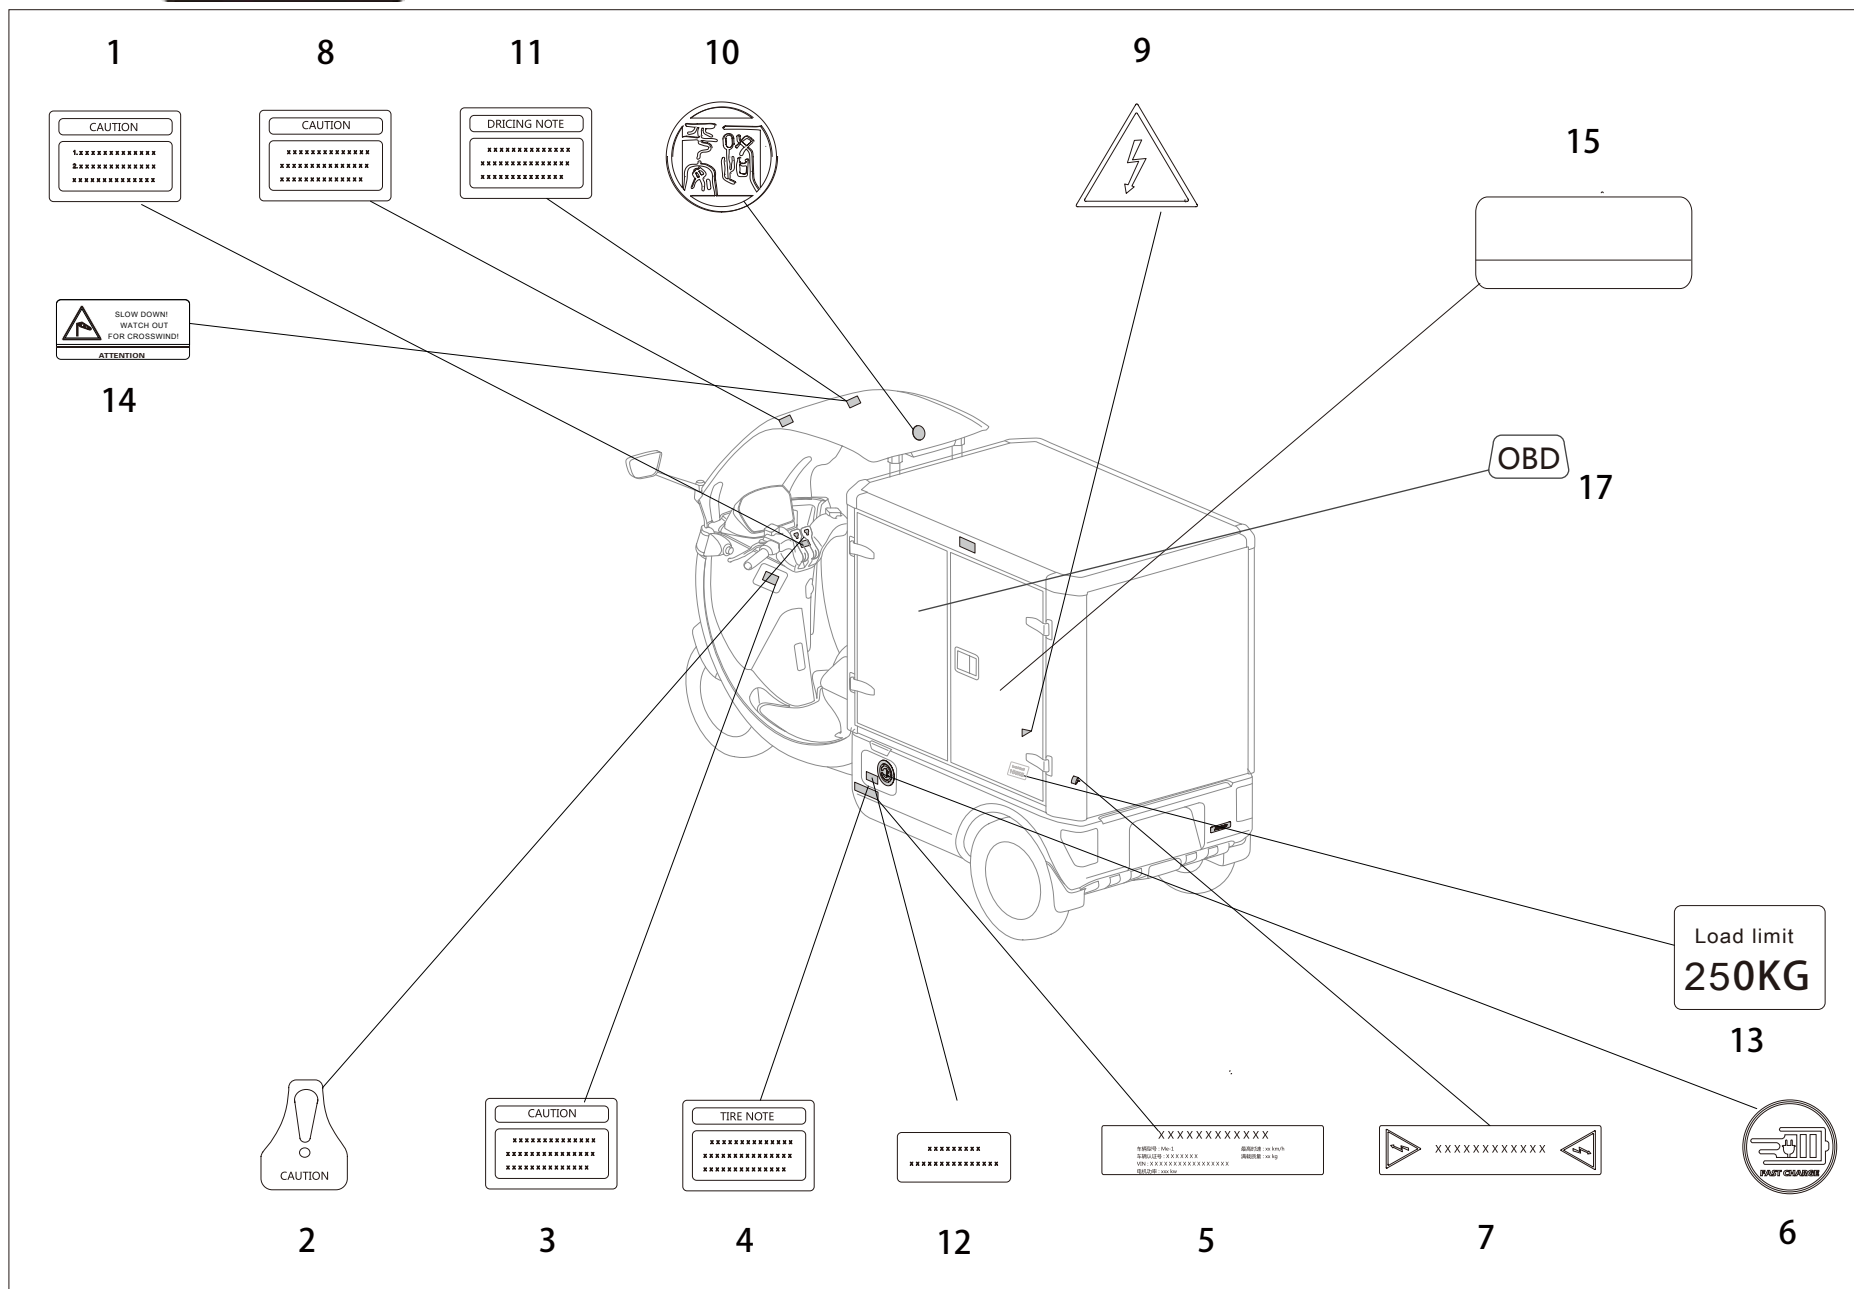



序号 (NO)	零部件代号 component code	零部件名称	component	数量 quantity	备注 notes
1	3903016-R10	手刹警示标贴	Hand brake warning label	1	日本客户专用
2	3903022-R10	手柄警示标贴	Handle warning label	2	
3	3903014-R10	玻璃清洗液标贴	Glass cleaning solution label	1	
4	3903044-R10	胎压标贴	Tire pressure label	1	
5	3904011-R10	铭牌	Nameplate	1	
6	3903042-R10	充电口标识	Charging port identification	1	
7	3903017-R10	高压线标贴	High voltage line labeling	1	
8	3903024-R10	摇摆器警示标贴	Warning label for swinging device	1	
9	3903018-R10	高压元件标贴	High voltage component labeling	3	
10	3903012-R10	平安符	Ping An Fu	1	
11	3903013-R10	驾驶警示标贴	Driving warning label	1	
12	3903031-R10	充电警示标贴	Charging warning label	1	
13	3903037-R10	限载警示贴	Load limit warning stickers	1	
14	3903038-R10	横风警示贴	Cross wind warning stickers	1	
15	3903043-R10	货箱安装警示标贴	Cargo box installation warning label	1	
16	3903046-R10	开关标贴 (OFF)	Switch label (OFF)	1	
17	3903048-R12	OBD诊断口标贴	OBD diagnostic port label	1	

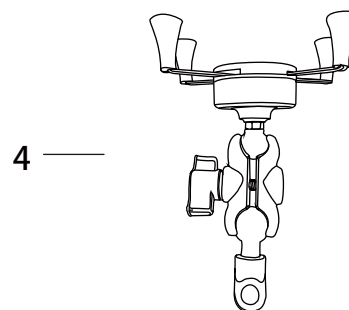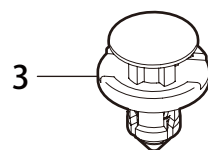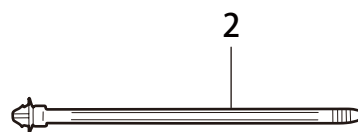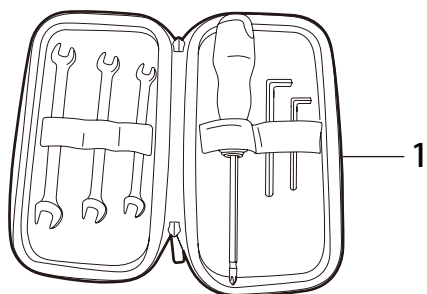



序号 (NO)	零部件代号 component code	零部件名称	Vcomponent name	数量 quantity	备注 notes
1	3901100-R1011	随车工具包	Vehicle tool kit	1	
2	3903026-R10	80MM 扎带	80MM tie	8	
3	3903021-R10	K 型卡扣	K-type buckle	10	
4	3916010-R10	手机支架	Mobile phone holder	1	

序号	紧固件安装位置	零部件代码	紧固件名称	数量
1	左右拖曳臂总成	Q1851270	六角法兰面螺栓 M12×1.25×70	2
		Q32912	1型非金属嵌件六角锁紧螺母 M12×1.25	2
2	驱动电机总成	Q1851250	六角头法兰面螺栓M12×50	4
		Q32012	六角头法兰面螺母M12	4
3	左右后减震器	Q151C1055	六角头螺栓 M10×1.25×55	4
		Q40310	弹垫 φ10	4
		Q401B10	平垫 φ10.5×φ20×2	4
		Q32910	1型非金属嵌件六角锁紧螺母 M10×1.25	4
4	方向管柱组件	3404021-R10	一级锁紧螺母	1
		3404022-R10	二级锁紧螺母	1
5	方向把安装底座	Q151C1055	六角头螺栓 M10×1.25×55	1
		Q40310	弹垫 φ10	1
		Q401B10	平垫 φ10.5×φ20×2	1
		Q341C10	1型六角螺母 M10×1.25	1
6	方向把安装组件	Q146B0825	六角头螺栓、弹簧垫圈和平垫圈组合件 M8×25	4
		Q43650	开口挡圈 φ5	2
7	方向把组件	Q218B0830	内六角圆柱头螺钉M8×30	4
8	前轮罩连接片	3102018-R10	圆头方径螺栓 M6×20	4
		Q33806	非金属镶嵌六角法兰锁紧螺母 M6	4
9	前轮辋总成	3101103-R10	前轮轴 M14×1.5×255	1
		Q395B14	盖型螺母 M14 ×1.5	1
		3101102-R10	双碟型自锁垫圈 M14	2
10	左右前减震器	Q218B0850	内六角圆柱头螺钉 M8 ×50	4
		Q218B0845Z	内六角螺栓、弹簧垫圈组合件M8×40	4
11	制动盘	3501039-R1001	制动盘安装螺栓	10
12	前副车架	Q1850865	六角法兰面螺栓 M8×65	1
		Q1850616	六角法兰面螺栓 M6 ×16	2
		Q33808	非金属镶嵌六角法兰锁紧螺母 M8	1
13	左右前制动卡钳总成	Q1850840	六角法兰面螺栓 M8×40	4
14	靠背	Q1850620B	六角法兰面螺栓 M6×20	4

15	座椅靠背可调节固定支架	Q218B0616	内六角圆柱头螺栓M6×16	2
		Q310B06	方形螺母M6	2
16	左装饰边条分总成	Q2714213	十字槽盘头自攻螺钉 ST4.2×1.4×13	6
		Q39704	A型簧片螺母 ST4.2	6
		Q31206	B型板簧螺母 M6	1
		3903021-R10	K型卡扣	1
		Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	1
		Q2734813	十字槽盘头自攻螺钉 ST4.8×1.6×13	2
17	右装饰边条分总成	Q2714213	十字槽盘头自攻螺钉 ST4.2×1.4×13	6
		Q39704	A型簧片螺母 ST4.2	6
		Q31206	B型板簧螺母 M6	1
		Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	1
		3903021-R10	K型卡扣	1
		Q2734813	十字槽盘头自攻螺钉 ST4.8×1.6×13	2
18	组合仪表总成	Q33806	非金属镶嵌六角法兰锁紧螺母 M6	3
19	仪表安装板	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.8×1.6×13	2
		3903021-R10	K型卡扣	1
20	把罩上盖、把罩下盖	5206115-R1011	大扁头内六角螺钉M6×12	2
		Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.8×1.6×13	4
21	前装饰面罩总成	Q220B4213B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.2×1.4×13	2
		Q39704	A型簧片螺母 ST4.2	2
22	前装饰面板	Q220B4213B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.2×1.4×13	6
		Q220B4816B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.8×1.6×16	4
		Q1850620B	六角法兰面螺栓 M6×20	2
23	置物箱	Q1850620B	六角法兰面螺栓M6×20	8
		Q31206	B型板簧螺母 M6	2
24	坐垫总成	Q146B0680	六角头螺栓 、弹簧垫圈和平垫圈组合件 M6×80	1
		Q32006	自锁螺母M6	1
25	车体前下护板	Q39704	A型簧片螺母 ST4.2	6
		3903021-R10	K型卡扣	6
		Q2734813B	十字槽盘头自攻螺钉ST4.8×1.6×13	4

26	内护板	Q39704	A型簧片螺母 ST4. 2	4
		Q31206	B型板簧螺母 M6	2
		Q1850620B	六角法兰面螺栓 M6×20	2
27	内护板左右安装网兜	Q271429. 5	十字槽盘头自攻螺钉 ST4. 2×1. 4×9. 5	16
28	挂钩	Q1850616	六角法兰面螺栓M6×16	1
29	车体后下护板	Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	4
30	脚踏安装板	Q1850616	六角法兰面螺栓M6×16	4
31	脚踏板装饰板	Q2714213	十字槽盘头自攻螺钉 ST4. 2×1. 4×13	12
32	坐垫下罩	Q39704	A型簧片螺母 ST4. 2	4
33	后挡板	Q2714213	十字槽盘头自攻螺钉 ST4. 2×1. 4×13	4
34	后车后围板	Q31206	B型板簧螺母 M6	2
		Q140B0616C	六角头螺栓和平垫圈组合件 M6×16	8
35	车架左围板	Q140B0616C	六角头螺栓和平垫圈组合件 M6×16	3
36	车架右围板	Q140B0616C	六角头螺栓和平垫圈组合件 M6×16	3
37	车架前围板	Q140B0616C	六角头螺栓和平垫圈组合件M6×16	4
38	侧围左挡泥板	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4. 8×1. 6×13	5
		Q140B0616C	六角头螺栓和平垫圈组合件M6×16	3
		Q31206	B型板簧螺母 M6	1
39	侧围右挡泥板	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4. 8×1. 6×13	5
		Q140B0616C	六角头螺栓和平垫圈组合件M6×16	3
40		Q31206	B型板簧螺母 M6	1
41	充电口总成	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4. 8×1. 6×13	6
42	后视镜	Q218B0850	内六角圆柱头螺钉 M8×50	2
		Q401B08	平垫 $\phi 8. 4 \times \phi 16 \times 1. 6$	2
43	后桥总成	Q1851270	六角法兰面螺栓M12×1. 25×70	4
44		Q32912	1型非金属嵌件六角锁紧螺母 M12×1. 25	4
45	左右后制动钳总成	Q146B0820	六角头螺栓、弹簧垫圈和平垫圈组合件M8×20	4

46	摇摆器	Q150B16100	六角头螺栓M16×100	1
		Q150B16220	六角头螺栓M16×220	1
		Q32016	六角法兰面螺母M16	2
		Q40316	弹垫 $\phi 16$	2
		Q401B16	平垫 $\phi 17 \times \phi 30 \times 3$	3
		2745101-R10	法兰头偏心螺栓M12×1.25×90	1
		2745103-R1001	止动垫圈 $\phi 15 \times \phi 29 \times 3$	2
		Q32912	1型非金属嵌件六角锁紧螺母 M12×1.25	1
47	摇摆器检修盖	Q218B0614Z	内六角圆柱头螺钉(弹平垫组合) M6*14	4
48	驻车拉线盒	Q218B0616	内六角螺栓M6*16	2
49	$\phi 24$ 线卡	Q218B0616	内六角螺栓M6*16	1
50	洗涤壶带电机总成	Q140B0616C	六角头螺栓和平垫圈组合件M6×16	3
51	车身控制器总成	Q146B0625	六角头螺栓、弹簧垫圈和平垫圈组合件M6×25	2
52	倒车雷达主机模块	Q146B0620	六角头螺栓、弹簧垫圈和平垫圈组合件 M6×20	2
53	12V蓄电池电池压条固定杆	Q33806	非金属镶嵌六角法兰锁紧螺母 M6	2
54	DC/DC转换器	Q1850616	六角法兰面螺栓M6×16	4
55	车载充电机	Q1850616	六角法兰面螺栓M6×16	4
56	驱动电机控制器	Q218B0850	内六角圆柱头螺钉M8×50	4
57	动力电池	Q146B0825	六角头螺栓、弹簧垫圈和平垫圈组合件 M8×25	6
58	高音喇叭	Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	1
59	雨刮电机	Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	3
60	声音模拟器	Q218B0616	内六角圆柱头螺钉M6×16	2
61	电门锁	Q218B0616	内六角圆柱头螺钉M6×16	2
62	坐垫锁	Q146B0616B	六角头螺栓、弹簧垫圈和平垫圈组合件M6×16	2
63	坐垫锁拉线	Q2140510	十字槽盘头螺钉 M5*10	1
		Q40305	弹垫 $\phi 5$	1
64	阻尼器	Q218B0835B	内六角圆柱头螺钉M8×35	2
		Q33808	非金属镶嵌六角法兰锁紧螺母 M8	1
65	后扬声器	Q218B0616	内六角圆柱头螺钉M6×16	2

66	风挡支撑管分总成	Q218B0625Z	内六角螺栓、弹簧垫圈和平垫圈组合件M6×25	12
67	后轮辋总成	Q395C10	轮胎螺母	8
68	顶棚	5206103-R10	台阶螺栓M8×33	2
		5206104-R10	台阶螺栓M6×16	2
		Q401B12	平垫 $\phi 13 \times \phi 23 \times 2.5$	4
69	后视镜座	Q1850630	六角法兰面螺栓M6×30	4
		8202027-R10	装饰垫片 $\phi 6$	2
		Q218B0616	内六角圆柱头螺钉M6×16	2
70	雨刮	Q32008	六角法兰面螺母M8×1.25	1
		5205022-R10	$\phi 5.5$ 外卡簧	1
		5205023-R10	平垫 $\phi 6 \times 11 \times 1.0$	2
		5205024-R10	$\phi 6$ 波浪垫片	1
71	制动油管三通	Q146B0625	六角头螺栓、弹簧垫圈和平垫圈组合件M6×25	2
72	左右前转向灯总成	Q220B4213	十字槽盘头自攻螺钉和平垫圈组合件 ST4.2×1.4×13	4
73	后左右组合灯总成	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合件 ST4.8×1.6×13	6
74	前大灯	Q220B4213	十字槽盘头自攻螺钉和平垫圈组合件 ST4.2×1.4×13	6
75	雾灯	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合 ST4.8×1.6×13	2
76	牌照灯	Q220B4813B	十字槽盘头自攻螺钉和平垫圈组合 ST4.8×1.6×13	2
77	高位制动灯	Q220B4213	十字槽盘头自攻螺钉和平垫圈组合件 ST4.2×1.4×13	2
78	加高货箱总成	Q218B1050	内六角圆柱头螺钉M10×1.25×50	4
		Q401B10	平垫 $\phi 10.5 \times \phi 20 \times 2$	4
		Q40310	弹垫 $\phi 10.5$	4

NO	Last installation location	Component code	Fastener Name	quantity
1	Left and right trailing arm assembly	Q1851270	Hexagon flange bolt	2
		Q32912	Type 1 non-metallic insert hexagon	2
2	Drive motor assembly	Q1851250	Hexagonal flange bolt M12×50	4
		Q32012	Hexagonal flange nut M12	4
3	Left and right rear shock absorbers	Q151C1055	Hexagon head boltM10×1.25×55	4
		Q40310	Spring washer φ 10	4
		Q401B10	Plain washer φ 10.5× φ 20×2	4
		Q32910	Type 1 non-metallic insert hexagon M10×1.25 lock nut	4
4	Steering column assembly	3404021-R10	Primary locknut	1
		3404022-R10	Secondary locknut	1
5	Direction handle mounting base	Q151C1055	Hexagon head boltM10×1.25×55	1
		Q40310	Spring washer φ 10	1
		Q401B10	Plain washer φ 10.5× φ 20×2	1
		Q341C10	Type 1 hex nut	1
6	Directional handle mounting assembly	Q146B0825	Hexagon head bolt, spring washer and plain washer assy M8×25	4
		Q43650	Split washer φ 5	2
7	Direction handle component	Q218B0830	Hexagon socket head cap screwM8×30	4
8	Front wheel cover connecting piece	3102018-R10	Round head square diameter bolt M6×20	4
		Q33806	Non-metallic insert hexagon lock nut M6	4
9	Front rim assembly	3101103-R10	Front axle M14×1.5×255	1
		Q395B14	Hex domed cap nut M14 ×1.5	1
		3101102-R10	Dual disc self-locking washer M14	2
10	Left and right front shock absorbers	Q218B0850	Hexagon socket head cap screw M8 ×50	4
		Q218B0845Z	Hexagonal bolts and spring washers assy M8×40	4
11	brake disc	3501039-R1001	Brake disc mounting bolt	10
12	front subframe	Q1850865	Hexagon flange bolt M8×65	1
		Q1850616	Hexagon flange bolt M6 ×16	2
		Q33808	Non-metallic insert hexagon lock nut	1
13	Left and right front brake caliper assembly	Q1850840	Hexagon flange bolt M8×40	4
14	backrest	Q1850620B	Hexagon flange bolt M6×20	4

15	Adjustable fixed bracket for seat back	Q218B0616	Hexagon socket head cap screw M6×16	2
		Q310B06	Square nut M6	2
16	Left decorative edge sub-assembly	Q2714213	Cross recessed pan head self-tapping screw ST4.2×1.4×13	6
		Q39704	Type A spring nut ST4.2	6
		Q31206	B-type leaf spring nut M6	1
		3903021-R10	K-type clip	1
		Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	1
		Q2734813	Cross recessed pan head self-tapping screw ST4.8×1.6×13	2
17	Right decorative edge sub-assembly	Q2714213	Cross recessed pan head self-tapping screw ST4.2×1.4×13	6
		Q39704	Type A spring nut ST4.2	6
		Q31206	B-type leaf spring nut M6	1
		Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	1
		3903021-R10	K-type clip	1
		Q2734813	Cross recessed pan head self-tapping screw ST4.8×1.6×13	2
18	Combined instrument assembly	Q33806	Non-metallic insert hexagon lock nut M6	3
19	instrument mounting plate	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	2
		3903021-R10	K-type clip	1
20	Cover the top of the handle, cover the bottom of the handle	5206115-R1011	Large flat head hexagon socket screw M6×12	2
		Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	4
21	Front decorative mask assembly	Q220B4213B	Cross recessed pan head self-tapping screw and plain washer assy ST4.2×1.4×13	2
		Q39704	Type A spring nut ST4.2	2
22	front decorative panel	Q220B4213B	Cross recessed pan head self-tapping screw and plain washer assy ST4.2×1.4×13	6
		Q220B4816B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×16	4
		Q1850620B	Hexagon flange bolt M6×20	2
23	storage box	Q1850620B	Hexagon flange bolt M6×20	8
		Q31206	B-type leaf spring nut M6	2
24	Seat cushion assembly	Q146B0680	Hexagon head bolt, spring washer and plain washer assy M6×80	1
		Q32006	Hexagon flange nut M6	1
25	Body front lower guard plate	Q39704	Type A spring nut ST4.2	6
		3903021-R10	K-type clip	6
		Q2734813B	Cross recessed pan head self-tapping screw ST4.8×1.6×13	4

26	Inner guard panel	Q39704	Type A spring nut ST4.2	4
		Q31206	B-type leaf spring nut M6	2
		Q1850620B	Hexagon flange bolt M6×20	2
27	left and right Net pockets of the inner guard panel	Q271429.5	Cross recessed pan head self-tapping screw ST4.2×1.4×9.5	16
28	hook up	Q1850616	Hexagon flange bolt M6×16	1
29	Body rear lower guard plate	Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	4
30	Foot pedal mounting plate	Q1850616	Hexagon flange bolt M6×16	4
31	Foot pedal decorative panel	Q2714213	Cross recessed pan head self-tapping screw ST4.2×1.4×13	12
32	seat cushion cover	Q39704	Type A spring nut ST4.2	4
33	Tailgate	Q2714213	Cross recessed pan head self-tapping screw ST4.2×1.4×13	4
34	Rear rear panel	Q31206	B-type leaf spring nut M6	2
		Q140B0616C	Hexagon head bolt and plain washer assy M6×16	8
35	Frame left panel	Q140B0616C	Hexagon head bolt and plain washer assy M6×16	3
36	Frame right panel	Q140B0616C	Hexagon head bolt and plain washer assy M6×16	3
37		Q140B0616C	Hexagon head bolt and plain washerassy M6×16	4
38	left Side fender	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	5
		Q140B0616C	Hexagon head bolt and plain washer assy M6×16	3
		Q31206	B-type leaf spring nut M6	1
39	right Side fender	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	5
		Q140B0616C	Hexagon head bolt and plain washer assy M6×16	3
		Q31206	B-type leaf spring nut M6	1
40		Q31206	B-type leaf spring nut M6	1
41	Charging port assembly	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	6
42	rearview mirror	Q218B0850	Hexagon socket head cap screw M8×50	2
		Q401B08	Plain washer $\phi 8.4 \times \phi 16 \times 1.6$	2
43	Rear axle assembly	Q1851270	Hexagon flange bolt M12×1.25×70	4
44		Q32912	Type 1 non-metallic insert hexagonlock nut M12×1.25	4
45	Left and right rear brake caliper assembly	Q146B0820	Hexagon head bolt, spring washer and plain washer assy M8×20	4

46	rocker	Q150B16100	Hexagon head bolt M16×100	1
		Q150B16220	Hexagon head bolt M16×220	1
		Q32016	Hexagon flange nut M16	2
		Q40316	Spring washer ϕ 16	2
		Q401B16	Plain washer ϕ 17× ϕ 30×3	3
		2745101-R10	Flange head eccentric bolt M12×1.25×90	1
		2745103-R1001	Tap washer ϕ 15× ϕ 29×3	2
		Q32912	Type 1 non-metallic insert hexagon lock nut M12×1.25	1
47	Rocker access cover	Q218B0614Z	Hexagon socket head cap screw, spring washer and plain washer assy M6*14	4
48	Parking cable box	Q218B0616	Hexagon socket head cap screw M6*16	2
49	ϕ 24 line card	Q218B0616	Hexagon socket head cap screw M6*16	1
50	Washing kettle with motor assembly	Q140B0616C	Hexagon head bolt and plain washer assy M6×16	3
51	Body controller assembly	Q146B0625	Hexagon head bolt, spring washer and plain washer assy M6×25	2
52	Reversing radar host module	Q146B0620	Hexagon head bolt, spring washer and plain washer assy M6×20	2
53	12V battery bar fixing rod	Q33806	Non-metallic insert hexagon lock nut M6	2
54	DC/DC converter	Q1850616	Hexagon flange bolt M6×16	4
55	on-board charger	Q1850616	Hexagon flange bolt M6×16	4
56	Drive motor controller	Q218B0850	Hexagon socket head cap screw M8×50	4
57	Power Battery	Q146B0825	Hexagon head bolt, spring washer and plain washer assy M8×25	6
58	high-pitched speaker	Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	1
59	wiper motor	Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	3
60	sound simulator	Q218B0616	Hexagon socket head cap screw M6×16	2
61	electric door lock	Q218B0616	Hexagon socket head cap screw M6×16	2
62	Cushion lock	Q146B0616B	Hexagon head bolt, spring washer and plain washer assy M6×16	2
63	Cushion lock cable	Q2140510	Cross recessed pan head screws M5*10	1
		Q40305	Washer ϕ 5	1
64	damper	Q218B0835B	Hexagon socket head cap screw M8×35	2
		Q33808	Non-metallic insert hexagon lock nut M8	1
65	rear speaker	Q218B0616	Hexagon socket head cap screw M6×16	2

66	Windshield support pipe sub-assembly	Q218B0625Z	Hexagon socket bolt, spring washer and plain washer assy M6×25	12
67	rear rim assembly	Q395C10	Wheel nut	8
68	ceiling	5206103-R10	Step bolt M8×33	2
		5206104-R10	Step bolt M6×16	2
		Q401B12	Plain washer $\phi 13 \times \phi 23 \times 2.5$	4
69	rear view mirror holder	Q1850630	Hexagon flange bolt M6×30	4
		8202027-R10	Gasket $\phi 6$	2
		Q218B0616	Hexagon socket head cap screw M6×16	2
70	wiper	Q32008	Hexagon flange bolt M8×1.25	1
		5205022-R10	$\phi 5.5$ Outer circlip	1
		5205023-R10	$\phi 6 \times 11 \times 1.0$ Flat washer	2
		5205024-R10	$\phi 6$ Wave washer	1
71	Brake oil pipe tee	Q146B0625	Hexagon head bolt, spring washer and plain washer assy M6×25	2
72	Left and right front turn signal assembly	Q220B4213	Cross recessed pan head self-tapping screw and plain washer assy ST4.2×1.4×13	4
73	Rear left and right lamp assembly	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	6
74	Headlight	Q220B4213	Cross recessed pan head self-tapping screw and plain washer assy ST4.2×1.4×13	6
75	fog lights	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	2
76	License Plate Light	Q220B4813B	Cross recessed pan head self-tapping screw and plain washer assy ST4.8×1.6×13	2
77	High brake lights	Q220B4213	Cross recessed pan head self-tapping screw and plain washer assy ST4.2×1.4×13	2
78	Heightened cargo box assembly	Q218B1050	Hexagon socket head cap screw M10×1.25×50	4
		Q401B10	Plain washer $\phi 10.5 \times \phi 20 \times 2$	4
		Q40310	Spring washer $\phi 10.5$	4

版本：Me-1(L5e-B)-20240625



浙江睿璞智能汽车股份有限公司

地址：浙江省湖州市长兴县太湖街道发展大道2501-1号

网址：www.rapsev.com

电话：+86-0572 6223030

Zhejiang RAP Intelligent Vehicle Co., Ltd

Address: Building 3, No.2501 Fazhan Avenue,Taihu District, Changxing, Huzhou City, Zhejiang Province, China,

P.C.: 313100

Tel:0086-572 6223030

Mail:info@rapsev.com

Website:www.rapsev.com