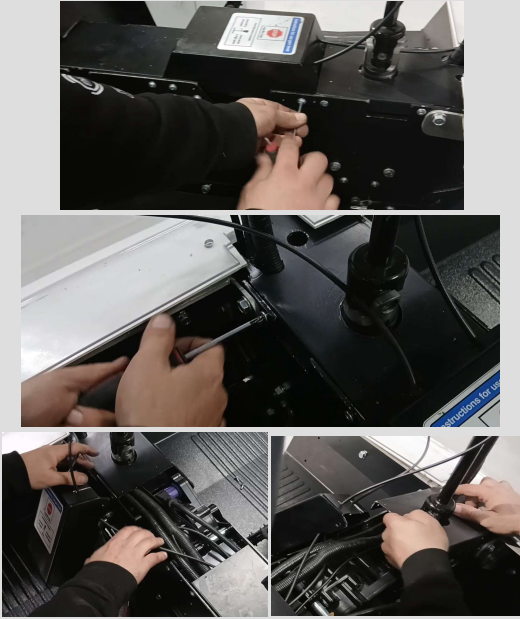
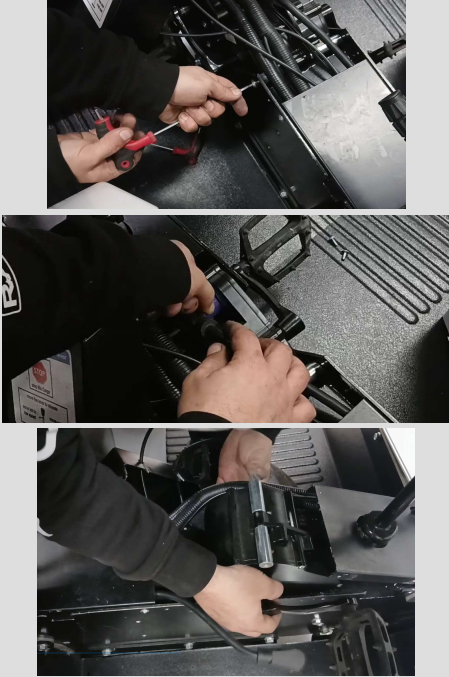


REPAIR SHEET - Crankset replacement

REASON:

OPERATOR	WORKSHOP	DATE
REGISTRATION	TIME 12min	COST

REQUIRED TOOLS			SAFETY	
☐ Allen key	☐ Philips screwdriver	☐	☐ Safety shoes	☐ safety gloves
☐	☐	☐	☐	☐
☐	☐	☐	☐	☐
☐	☐	☐	☐	☐

	TOOLS	PROCESS	ASSEMBLY DRAWING	ESTIMATED TIME
1	Allen key, philips screwdriver	Removing the pedal cover and steering cover: 1- Using an Allen key, loosen and remove the 4 screws securing the crankset cover. 2- Con un destornillador cruciforme, aflojar y retirar los 4 tornillos de fijación de la tapa de la dirección. 3- Remove the pedal cover and lift the steering cover to create more workspace.		3
		REMARKS		REAL TIME
2	Allen key	Removing the crankset: 1- Using an Allen key, loosen and remove the 6 screws securing the crankset. 2- Disconnect the crankset's electrical connector. 3- Remove the crankset from its housing.		3
		REMARKS		REAL TIME

TOOLS		PROCESS	ASSEMBLY DRAWING	ESTIMATED TIME	
3	Allen key	Installing the crankset: 1- Place the new crankset in its housing. 2- Connect the crankset's electrical connector. 3- Using an Allen key, install and tighten the 6 screws securing the crankset.	  	3	
		REMARKS			REAL TIME
4	Allen key, philips screwdriver	Installing the crankset and steering covers: 1- Position the steering cover and, using a Phillips screwdriver, install and tighten the 4 screws securing the cover. 2- Position the crankset cover and, using an Allen key, install and tighten the 4 screws securing the cover.	 	3	
		REMARKS			REAL TIME