

REPAIR SHEET - RELAY BOX REPLACEMENT

REASON:

OPERATOR

WORKSHOP

DATE

REGISTRATION

TIME

0h 34min

COST

REQUIRED TOOLS

SAFETY

☐	7mm Deep hexagonal socket	☐		☐		☐	Steel toe-cap shoes
☐	small ratchet wrench	☐		☐		☐	Safety gloves
☐	small wrench extension	☐		☐		☐	
☐		☐		☐		☐	
☐		☐		☐		☐	

TOOLS

PROCESS

ASSEMBLY DRAWING

ESTIMATED TIME

Removal of the front bodywork.

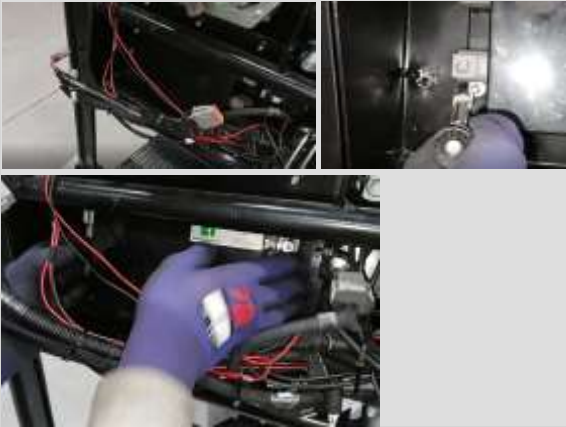
See procedure manual nº34. Front bodywork replacement.

10

REMARKS

REAL TIME

1

	TOOLS	PROCESS	ASSEMBLY DRAWING	ESTIMATED TIME
2	Small ratchet wrench, Small wrench extension, 7mm Deep hexagonal socket.	Removal of the relay box. 1- Unplug the 4 cables connected to the relay box by pressing the clips on both sides that hold the connector in its socket and pull it out. 2- Using a 7mm socket, unscrew and remove the 4 nuts that hold the controller and its washers. 3- Pull the box parallel to the screws that pass through it so that it does not get stuck on the screws.		7
		REMARKS		REAL TIME