

REPAIR SHEET - Button panel or RC8 replacment

REASON:

OPERATOR

WORKSHOP

DATE

REGISTRATION

TIME

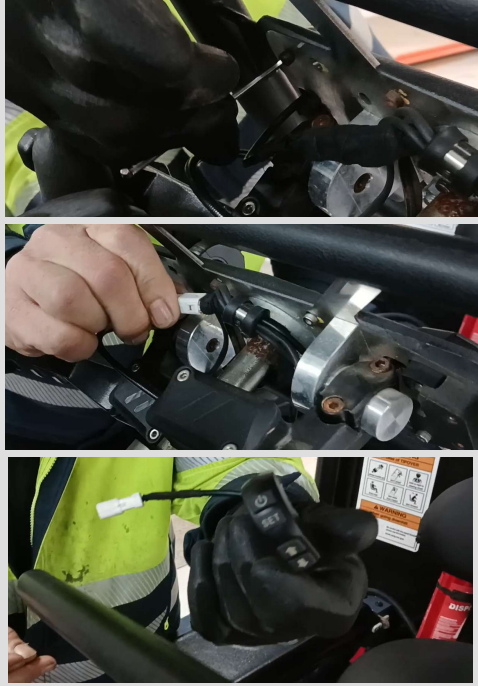
0h 26min

COST

HERRAMIENTAS NECESARIAS

SEGURIDAD

☐ Allen key	☐	☐	☐ Safety shoes
☐	☐	☐	☐ Safety gloves
☐	☐	☐	☐
☐	☐	☐	☐
☐	☐	☐	☐

TOOLS	PROCESS	ASSEMBLY DRAWING	ESTIMATED TIME
1 Allen key	Button panel removal: 1- Loosen and remove the two mounting screws securing the button panel. 2- Disconnect the button panel electrical connector and remove the button panel.		1
REMARKS			REAL TIME
2 Allen key	Button panel installation: 1- Position the new button panel and tighten the two mounting screws using an Allen key. 2- Connect the electrical connector to the new button panel.		1
REMARKS			REAL TIME

TOOLS		PROCESS	ASSEMBLY DRAWING	ESTIMATED TIME
3	Allen key	RC8 removal: 1- Remove the plastic front panel (refer to the repair sheet for plastic front panel replacement). 2- Using an Allen key, loosen the RC8 mounting screw. 3- Follow the RC8 cable to the front of the vehicle. The RC8 cable is identified by the marking "CNCRT1D" on the cable. Disconnect the RC8 electrical connector and carefully remove the RC8 together with its wiring.	 	12
		REMARKS		REAL TIME
4	Allen key	Montaje del RC8: 1- Route the wiring of the new RC8 the same way as the original and connect it. 2- Place the RC8 and tighten the mounting screw with an Allen key. 3- Install the plastic front panel (refer to the repair sheet for plastic front panel replacement).	 	12
		REMARKS		REAL TIME